TABLE OF CONTENTS ET6KM/R INSTRUCTION MANUAL

SECTION 100	DESCRIPTION & SPECIFICATIONS
l19120	INSTALLATION DIMENSIONS - ET6KM
l19121	INSTALLATION DIMENSIONS - ET6KR
l19113	CAPACITY CHART - ET6KM/R 6-10-14 FT
l19114	CAPACITY CHART - ET6KM/R 10-18 FT
l13497	TYPICAL REINFORCEMENT FOR MOUNTING CRANE ON TOP OF SERVICE BODY
S14930	INSTALLATION DRAWING - 14930 MOUNTING PEDESTAL
I14930	INSTALLATION DRAWING - 14930 MOUNTING PEDESTAL
18518	INSTALLATION DRAWING - 18500-P MANUAL OUTRIGGER
13510	INSTALLATION DIMENSIONS - 11822 MANUAL OUTRIGGER FOLD AWAY TYPE
13509	INSTALLATION DIMENSIONS - 13500 MANUAL OUTRIGGER SIDE BRACKET

SECTION 150 SAFETY

850711 SAFETY & HAZARDS - GENERAL

15394 VEHICLE & CRANE ELECTRICAL HAZARD INFORMATION

SECTION 200 INSTALLATION

119115	ET6KM INSTALLATION INSTRUCTIONS
119116	ET6KM OPERATION & MAINTENANCE INSTRUCTIONS
l19117	ET6KR INSTALLATION INSTRUCTIONS
l19118	ET6KR OPERATION & MAINTENANCE INSTRUCTIONS
711105	CABLE & BATTERY REQUIREMENTS - ET AND HT CRANES
15660	BATTERY CABLE INSTALLATION DRAWING
711006	WIRE ROPE SPECIFICATIONS


SECTION 300 MAINTENANCE & SERVICE 800306 MINIMUM VOLTAGE TEST


SECTION 400 REPLACEMENT PARTS

l19109	ET6KM REPLACEMENT PARTS DRAWING
l19108	ET6KM REPLACEMENT PARTS LIST
l19101	ET6KR REPLACEMENT PARTS DRAWING
l19100	ET6KR REPLACEMENT PARTS LIST
18658	ELECTRICAL SYSTEM SCHEMATIC - ET6KM
l18668	ELECTRICAL SYSTEM SCHEMATIC - ET6KR
18667	HYDRAULIC SYSTEM SCHEMATIC - ET6KM/R
17140	REPLACEMENT PARTS - 2 FUNCTION PENDANT CONTROL
17150	REPLACEMENT PARTS - 3 FUNCTION PENDANT CONTROL
16770	16770 SWIVEL TERMINAL ASSEMBLY REPLACEMENT PARTS
I16100	16100 SERIES POWER UNIT REPLACEMENT PARTS DRAWING
811016	16100 SERIES POWER UNIT REPLACEMENT PARTS LIST
19518	17252/17253 HYDRAULIC POWER UNIT REPLACEMENT PARTS DRAWING
900309	17252/17253 HYDRAULIC POWER UNIT REPLACEMENT PARTS LIST
l19119	18671-1 ELEVATION CYLINDER REPLACEMENT PARTS
l17390	17299 BASE MOUNTING DIMENSIONS - ET6KR
17384	13424 BASE MOUNTING DIMENSIONS - ET6KM


VENTURO	MFG., INC.	TABLE OF CONTENTS	11-2-98A	SECTION -	
ENIORO	CINCINNATI, OHIO	ET6KM/R	SUPERCEDES 6-16-98	19517	

WARNING: THESE PRODUCTS ARE NOT PASSENGER LIFTS. THEY ARE NOT DESIGNED OR INTENDED TO BE USED TO LIFT, SUPPORT, OR OTHERWISE TRANSPORT PERSONNEL.

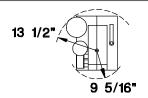


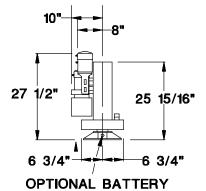

CABLE HOLE

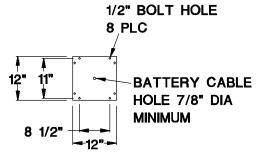


BASE MOUNTING DIMENSIONS

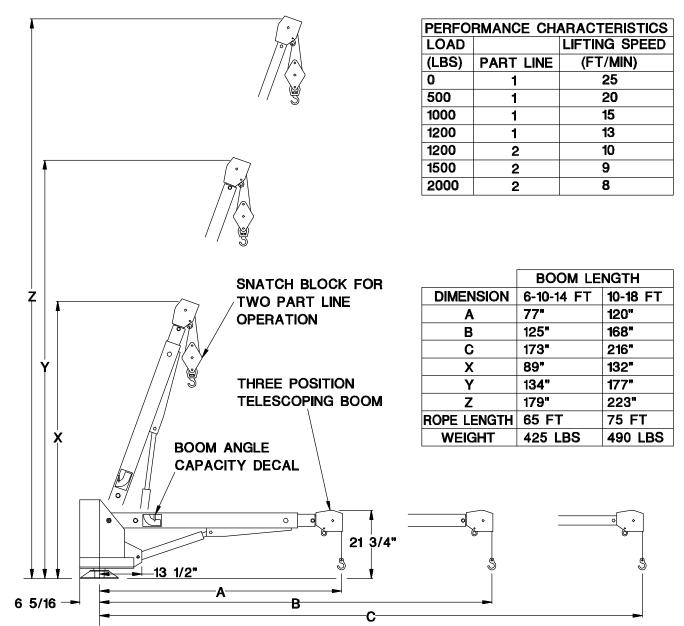




INSTALLATION DRAWING	10-14-97A	SECTION C100
ET6KM CRANE	supersedes 4-8-96	119120


WARNING: THESE PRODUCTS ARE NOT PASSENGER LIFTS. THEY ARE NOT DESIGNED OR INTENDED TO BE USED TO LIFT, SUPPORT, OR OTHERWISE TRANSPORT PERSONNEL.

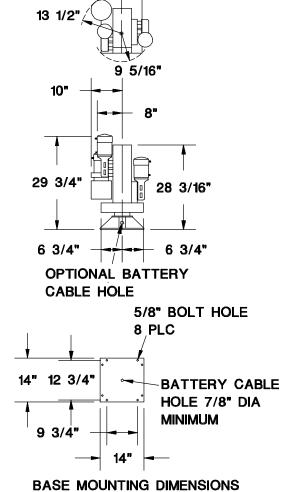

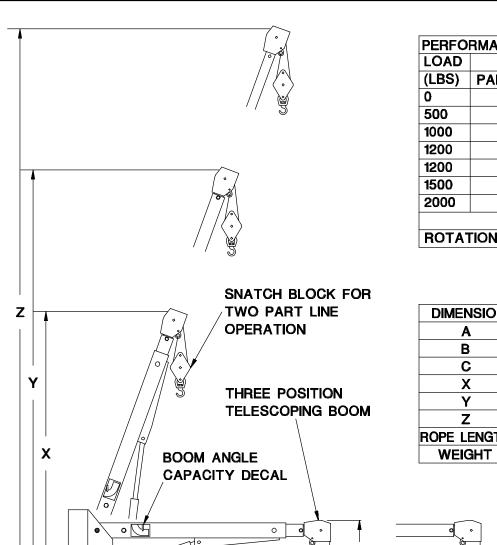

PERFORMANCE CHARACTERISTICS			
LOAD		LIFTING SPEED	
(LBS)	PART LINE	(FT/MIN)	
0	1	25	
500	1	20	
1000	1	15	
1200	1	13	
1200	2	10	
1500	2	9	
2000	2	8	
BOTATION SPEED = 3/4 - 1 RPM			


	BOOM LENGTH		
DIMENSION	6-10-14 FT	10-18 FT	
Α	77"	120"	
В	125"	168"	
С	173"	216"	
Х	91"	134"	
Υ	136"	179"	
Z	181"	225"	
ROPE LENGTH	65 FT	75 FT	
WEIGHT	545 LBS	610 LBS	

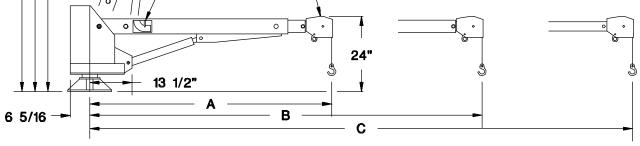



INSTALLATION DRAWING	10-14-97A	SECTION C100
ET6KR CRANE	SUPERSEDES 4-8-96	l19121


ET6K (M/R) 6-10-14 BOOM MAXIMUM CAPACITY CHART

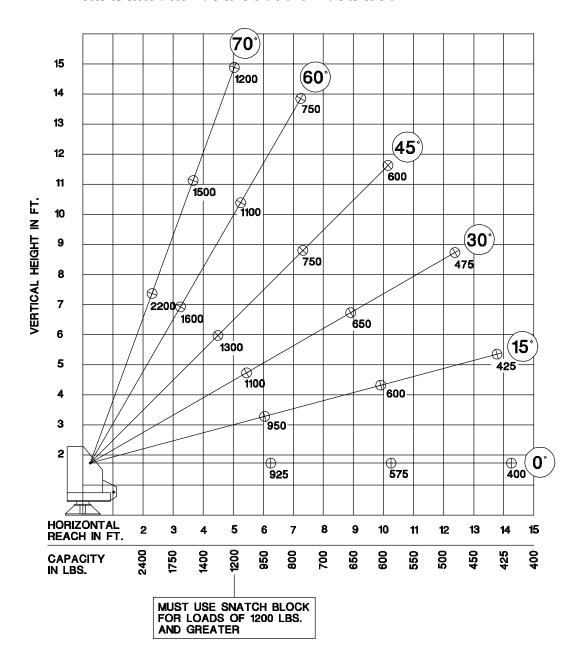




ET6KM/R 6-10-14 FT	SUPERSEDES 4-8-96	I19113
MAX CAPACITY CHART	DATE 10-14-97A	SECTION C100


ET6K (M/R) 10-18 BOOM MAXIMUM CAPACITY CHART

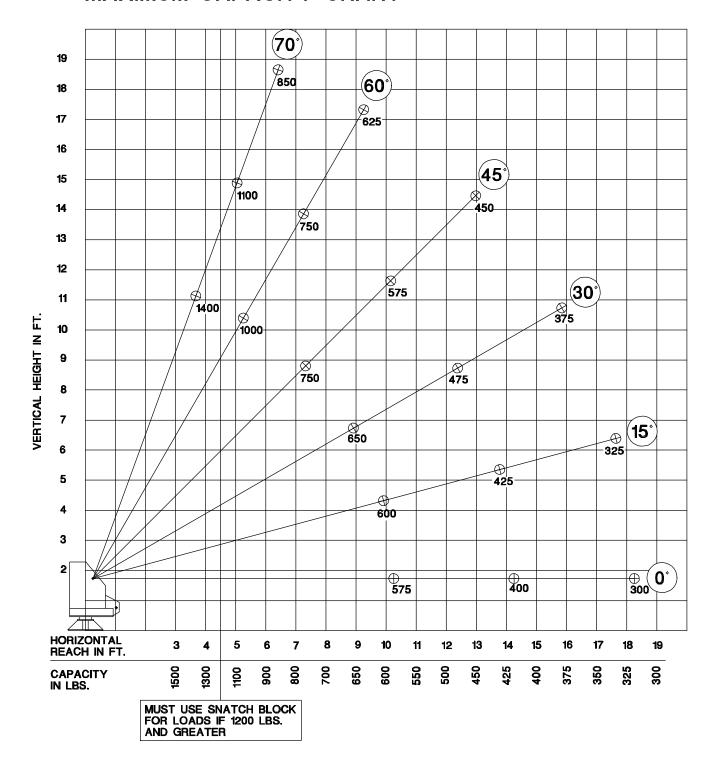



ENTURO MFG., INC. CINCINNATI, OHIO

MAX CAPACITY CHART	date 10-14-97A	SECTION C100
ET6KM/R 10-18 FT	SUPERSEDES 4-8-96	119 ⁻

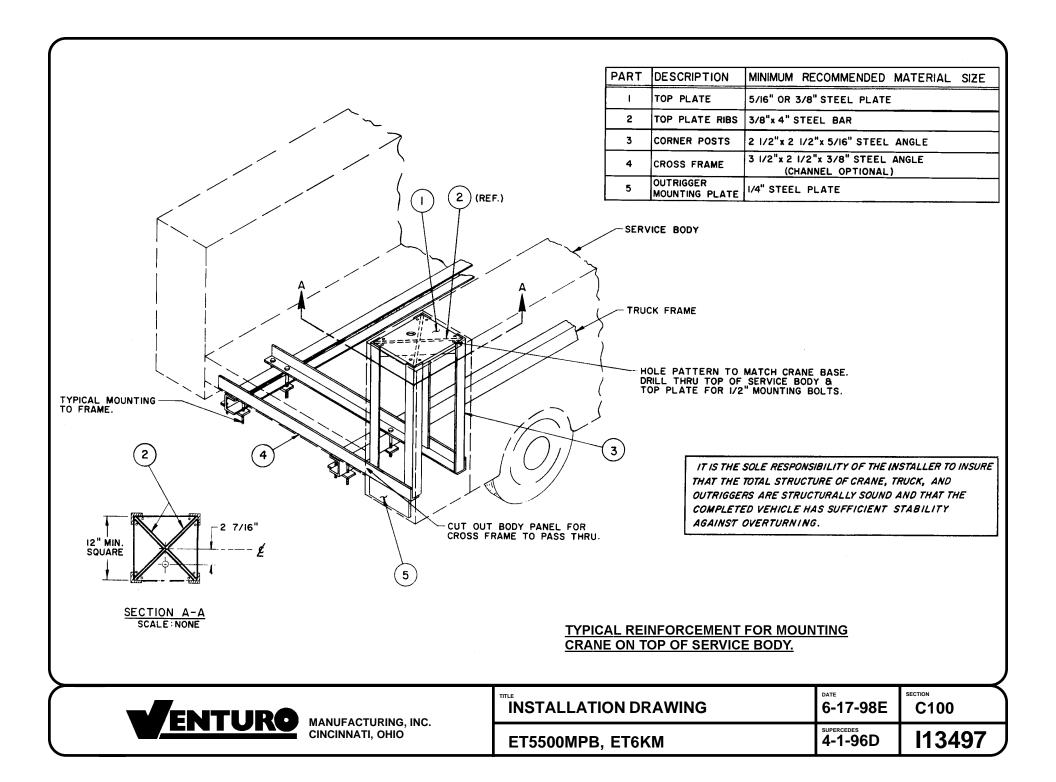

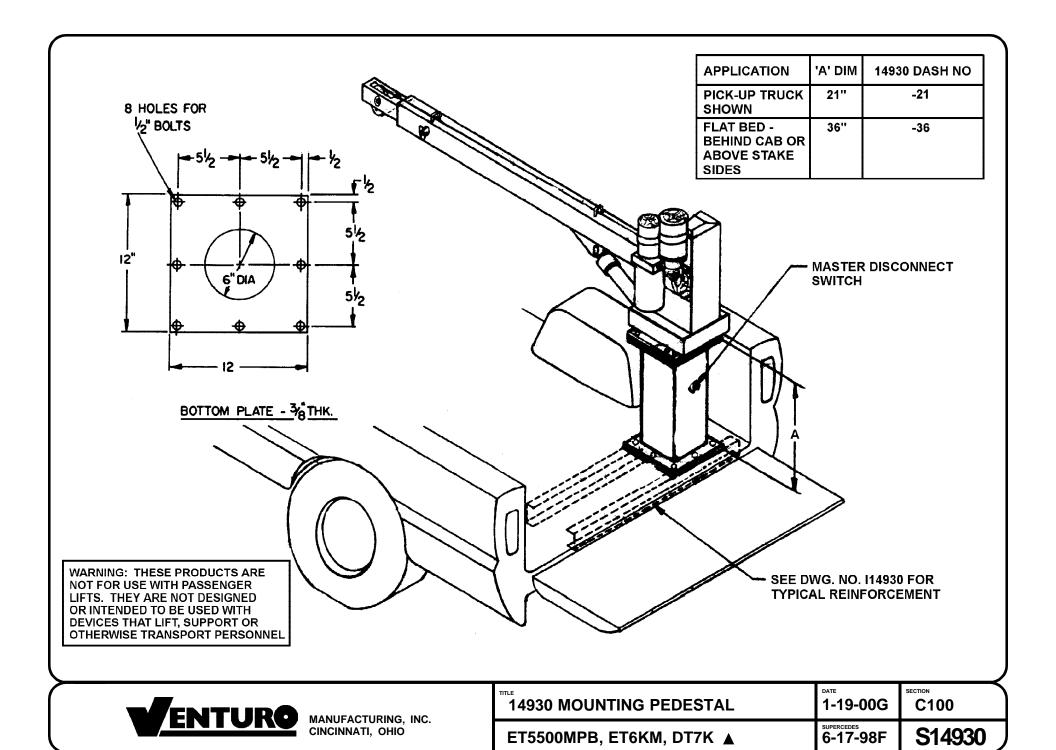

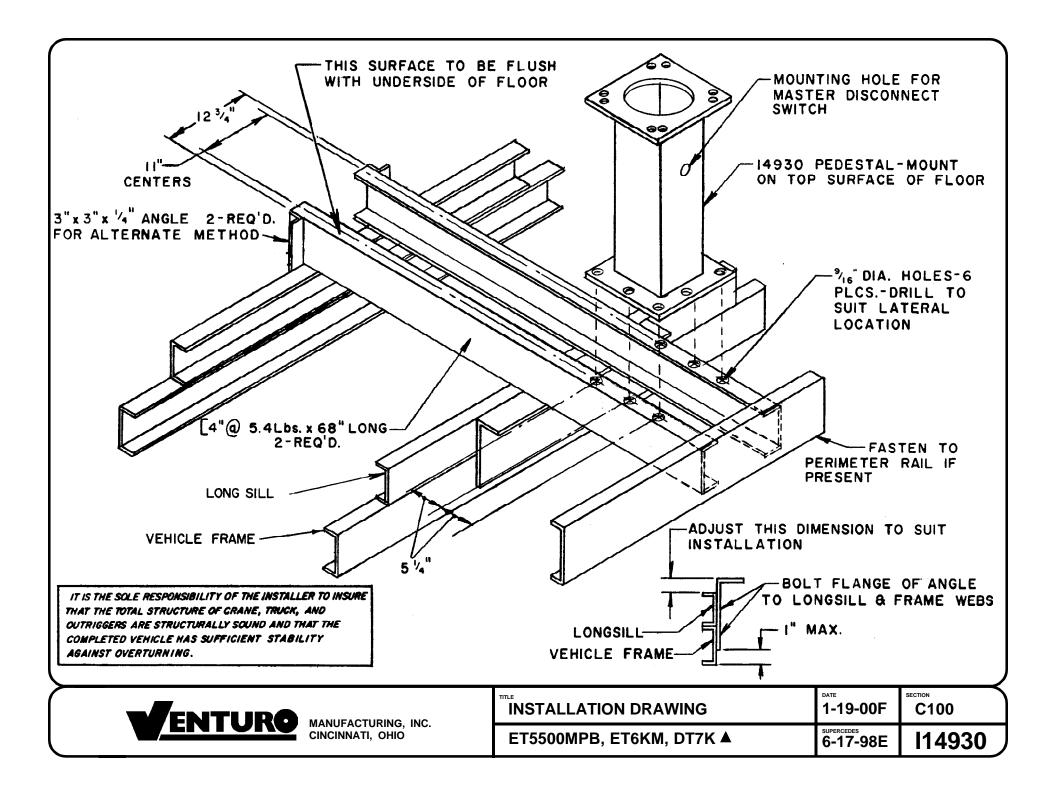


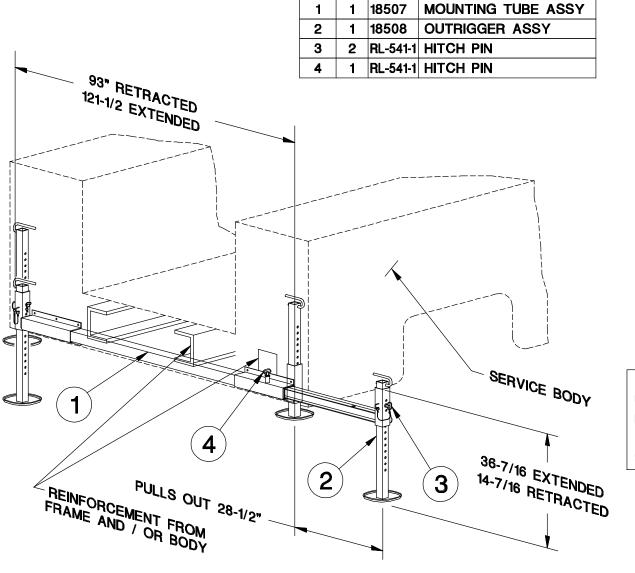

ITEM

QTY PART NO.


DESCRIPTION

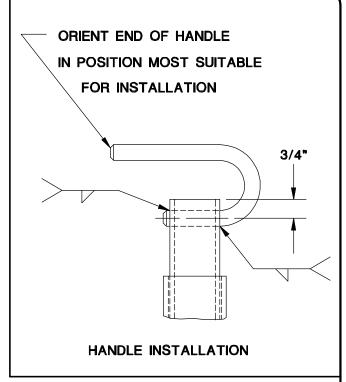


WARNING - THESE PRODUCTS ARE NOT FOR USE WITH PASSENGER LIFTS. THEY ARE NOT DESIGNED OR INTENDED TO BE USED WITH DEVICES THAT LIFT, SUPPORT OR OTHERISE TRANSPORT PERSONNEL


MANUFACTURING, INC.
CINCINNATI, OHIO


INSTALLATION DRAWING	10-14-97A	C120
18500-P MANUAL OUTRIGGER	SUPERSEDES 9-2-93	18518

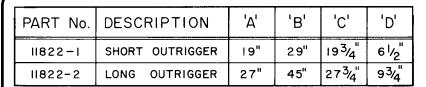

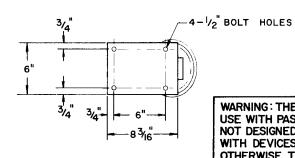


WARNING: THESE PRODUCTS ARE NOT FOR USE WITH PASSENGER LIFTS. THEY ARE NOT DESIGNED OR INTENDED TO BE USED WITH DEVICES THAT LIFT, SUPPORT OR OTHERWISE TRANSPORT PERSONNEL.

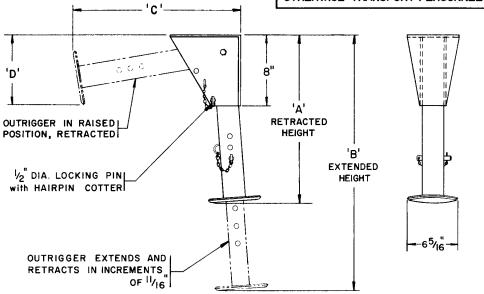

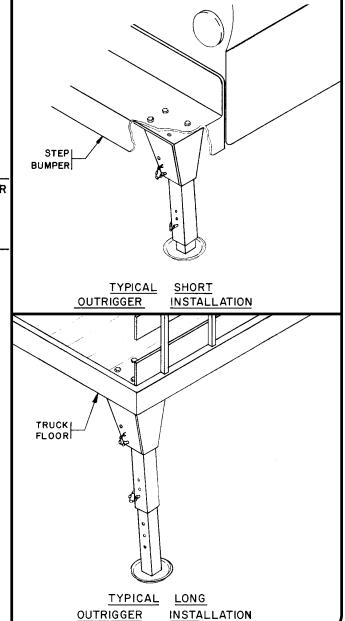



INSTALLATION DRAWING	6-17-98C	C100
ET5500MPB, ET6KM/R	10-12-83B	13510

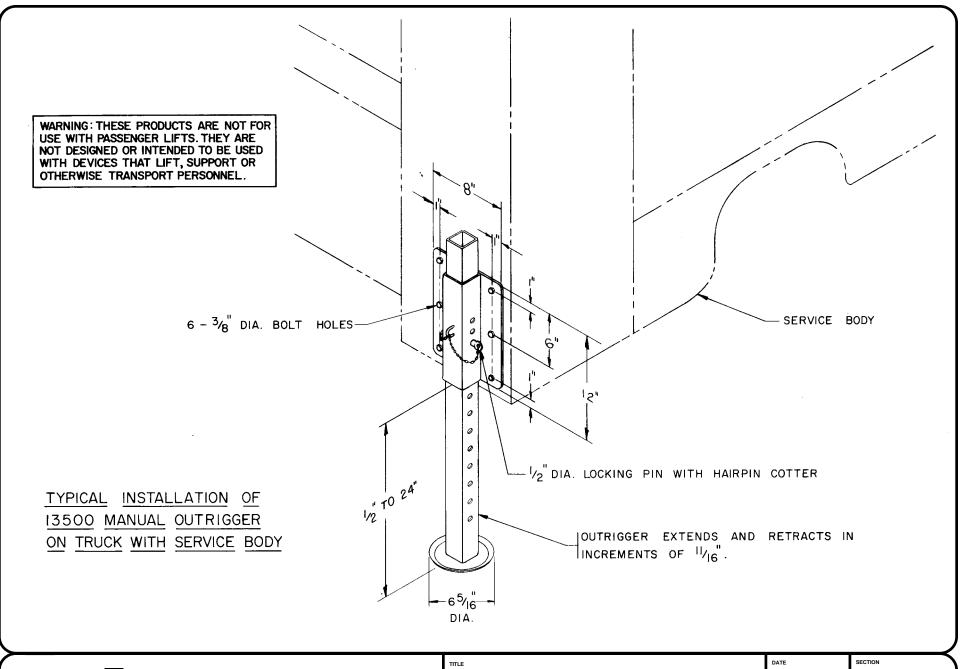

	MANUFACTURING, INC. CINCINNATI, OHIO
--	---

INSTALLATION DRAWING	6-17-98C	C100
ET5500MPB, ET6KM/R	8-1-83B	13509

CRANE SAFETY AND HAZARDS

ET5500MPB/R, ET6KMPB/R, ET8100R, ET10K(X), ET25K(X)

CAUTIONS

- 1. INSPECT VEHICLE AND CRANE, INCLUDING OPERATION, PRIOR TO USE DAILY.
- 2. DO NOT USE THIS EQUIPMENT EXCEPT ON SOLID, LEVEL SURFACE WITH CRANE MOUNTED ON FACTORY-RECOMMENDED TRUCK.
- 3. BEFORE OPERATING THE CRANE, REFER TO MAXIMUM LOAD (CAPACITY) CHART ON CRANE FOR OPERATING (LOAD) LIMITATIONS.
- 4. DO NOT OPERATE, WALK, OR STAND BENEATH BOOM OR A SUSPENDED LOAD.
- 5. ATTACH PENDANT CORD SUPPORT SNAP TO ATTACHMENT POINT BEFORE PLUGGING IN PENDANT.
- UNPLUG PENDANT AND SHUT OFF MASTER DISCONNECT SWITCH WHEN CRANE NOT IN USE.
- 7. FOR TRAVEL, BOOM MUST BE IN STOWED POSITION.

DANGER

- THIS CRANE IS NOT A PASSENGER LIFT
- IT IS NOT DESIGNED OR INTENDED TO BE USED TO LIFT, SUPPORT, OR OTHERWISE TRANSPORT PERSONNEL.

YOU MUST NOT OPERATE THIS CRANE UNLESS

- YOU HAVE BEEN TRAINED IN THE SAFE OPERATION OF THIS CRANE AND
- 2. YOU KNOW AND FOLLOW THE SAFETY AND OPERATING RECOMMENDATIONS CONTAINED IN THE MANUFACTURER'S MANUALS, YOUR EMPLOYER'S WORK RULES, AND APPLICABLE GOVERNMENT REGULATIONS. AN UNTRAINED OPERATOR SUBJECTS HIMSELF AND OTHERS TO DEATH OR SERIOUS INJURY.

ELECTROCUTION HAZARD

- THIS MACHINE IS NOT INSULATED.
- MAINTAIN SAFE CLEARANCES FROM ELECTRICAL LINES AND APPARATUS.
- YOU MUST ALLOW FOR BOOM SWAY, ROCK OR SAG, AND ELECTRICAL LINE AND LOADLINE SWAYING.
- THIS LIFTING DEVICE DOES NOT PROVIDE PROTECTION FROM CONTACT WITH OR PROXIMITY TO AN ELECTRICALLY CHARGED CONDUCTOR.
- YOU MUST MAINTAIN A CLEARANCE OF AT LEAST 10 FEET BETWEEN ANY PART OF THE CRANE, LOADLINE, OR LOAD, AND ANY ELECTRICAL LINE OR APPARATUS CARRYING UP TO 50,000 VOLTS. ADDITIONAL CLEARANCE IS REQUIRED FOR VOLTAGES IN EXCESS OF 50,000 VOLTS. REFER TO DRAWING 15394 FOR ADDITIONAL INFORMATION.
- DEATH OR SERIOUS INJURY WILL RESULT FROM CONTACT OR INADEQUATE CLEARANCE.

ENTURO MFG., INC. CINCINNATI, OHIO	MEG INC	INSTALLATION DWG	10-14-97F	C150
	ET5500MPB-ET25KX	5-13-97E	850711	

VEHICLE & CRANE MOUNTED ELECTRICAL HAZARD SIGN APPLICATION & INFORMATION

ET & HT CRANE SERIES





SIGN NO. 15393A DISPLAYS THE INTERNATIONAL SYMBOL FOR ELECTRICITY AND WARNS OF DANGER FROM AN ELECTRICALLY CHARGED VEHICLE, CRANE, OR LOAD. FOUR ARE RECOMMENDED (ONE FOR EACH SIDE AND ONE FOR EACH END OF VEHICLE) TO BE APPLIED IN LOCATIONS WHICH ARE READILY VISIBLE TO GROUND PERSONNEL.

UNLAWFUL TO OPERATE THIS EQUIPMENT WITHIN 10 FEET OF HIGH-VOLTAGE LINES OF 50,000 VOLTS OR LESS.

FOR MINIMUM CLEARANCES OF HIGH-VOLTAGE LINES IN EXCESS OF 50,000 VOLTS, SEE CRANE VISTRUCTION MANUAL OR CAL-OSHA ARTICLE 86, TITLE 8, HIGH VOLTAGE ELECTRICAL SAFETY ORDERS. SIGN NO. 15401 PROVIDES ADDITIONAL WARNING OF LEGAL REQUIREMENTS WHEN OPERATING NEAR HIGH VOLTAGE LINES. THIS SIGN IS PLACED ON THE CONTROL PENDANT SIDE OF BOOM.

REQUIRED MINIMUM CLEARANCES REFERRED TO ON SIGN NO. 15401

REQUIRED CLEARANCES FROM OVERHEAD HIGH-VOLTAGE LINES

	AL VOLTAGE (kV) TO PHASE)	MINIMUM REQUIRED CLEARANCE (FEET) *
over over over over over	0 - 50 50 - 200 200 - 350 350 - 500 500 - 750 750 - 1000	10 15 20 25 35 45

REQUIRED CLEARANCES FROM ENERGIZED HIGH-VOLTAGE CONDUCTORS (WHILE IN TRANSIT)

NOMINAL VOLTAGE (kV)	MINIMUM REQUIRED
(PHASE TO PHASE)	CLEARANCE (FEET) *
0 - 0.75	4
over 0.75 - 50	6
over 50 - 345	10
over 345 - 750	16
over 750 - 1000	20

^{*} NOTE: ENVIRONMENTAL CONDITIONS SUCH AS FOG, SMOKE, OR PRECIPITATION MAY REQUIRE INCREASED CLEARANCES



INSTALLATION INSTRUCTIONS

MODEL(S): ET6KM

CAPACITY-REFERENCE DRAWINGS 119113 AND 119114

6-10-14 FT BOOM - 400 LBS @ 14 FT REACH - 2200 LBS @ 2.5 FT REACH 10-18 FT BOOM - 300 LBS @ 18 FT REACH - 1400 LBS @ 3.5 FT REACH

12 VOLT ELECTRIC

STANDARD EQUIPMENT

MOMENT OVERLOAD FUNCTION SHUT-OFF SYSTEM
CABLE OVERHAUL WEIGHT
SWIVEL SNATCH BLOCK
20 FT PLUG-IN PENDANT CONTROL
MASTER DISCONNECT SWITCH
65 FT (6-10-14) AND 75 FT (10-18) 3/16" WIRE ROPE AND HOOK WITH SAFETY LATCH
25 FT. OF #2 BATTERY CABLE PLUS 4 FT FROM CRANE TO DISCONNECT SWITCH

OPTIONAL EQUIPMENT

OUTRIGGERS - RECOMMENDED WITH VEHICLES OF 10,000 GVW OR LESS MOMENT OVERLOAD ALARM (MOMENT OVERLOAD FUNCTION SHUT-OFF SYSTEM WITHOUT ALARM IS STANDARD)

MOUNTING PEDESTAL - 36" HIGH

REFERENCE DRAWINGS	INSTALLATIONINSTRUCTIONS
119120 113497 114930	 Select mounting location to clear 13 1/2" housing swing radius. Provide a strong and rigid mounting base. See installation drawings for typical construction of pedestal base for behind cab mounting and reinforcement for mounting on top of service body. Similar reinforcement is required for mounting crane on floor of truck or on 14930 pedestal.
	 Drill eight clearance holes for 1/2" diameter mounting bolts (not provided). If battery cable is to be routed down through center of the quill and at the center of the base, underneath the floor, drill 7/8" diameter hole.
711105 15660	Route battery cable out center of base. Bolt base assembly in position. Assemble master disconnect switch to battery cables and mount in convenient spot. Connect long battery cable to battery. NOTE REQUIREMENTS FOR ADEQUATE WIRING & BATTERY
I19120 711006	Assemble boom and elevating cylinder (10-18 ft boom only) and wire rope to housing assembly. WARNING - be sure that breather cap is installed hydraulic power unit prior to operation.
18518 13509 13510	5. Install optional outriggers if required. Provide necessary reinforcement.

ENTURO MFG., INC. CINCINNATI, OHIO		INSTALLATION INFO	10-14-97A	C200	
	ET6KM	4-8-96	l19115	\int	

OPERATING AND MAINTENANCE INSTRUCTIONS

MODEL(S): ET6KM

OPERATING INSTRUCTIONS

1. ELECTRIC WINCH

Controlled by plug-in remote pendant. NOTE - Snatch block must be used for loads in excess of 1200 lbs.

2. BOOM ELEVATION

Controlled by plug-in remote pendant. Electric-hydraulic power unit allows full power lifting and lowering of capacity loads.

3. MANUAL ROTATION

Controlled by handle operated brake. Crane can be rotated continuously 360 deg or more. Depress brake handle to adjust for full 180 deg. operating range of handle.

4. CONTROLPRIORITY SYSTEM

As a built-in safety feature, the control priority system allows the operator to perform only one major and one minor function at any one time. Major functions are winch up and boom up. Minor functions are winch down and boom down.

WINCH UP has priority over BOOM UP

BOOM DOWN and WINCH DOWN can be operated with any other function.

5. MOMENT OVERLOAD FUNCTION SHUT-OFF SYSTEM

A moment overload shut-off system is also provided as a built-in safety feature. When the system detects a moment overload condition, it disables the winch up and boom down functions. The winch down and boom up functions remain operational to allow the operator to eliminate the overload condition.

TELESCOPING BOOM

The 6-10-14 ft. and 10-18 ft. booms can be manually extended. Toggle pin(s) lock the boom in the selected position.

7. MASTER DISCONNECT SWITCH

The master disconnect switch cuts supply current from the battery and should be turned OFF when the crane is not in use.

8. CAPACITY INDICATOR

Select boom reach and angle allowable for load by using the capacity indicator arrow and chart on either side of the boom.

MAINTENANCE

Crane requires only periodic lubrication. Swivel (rotation) bearings are self-lubricating.

Fill Winch Gear Box to level of plug with S.A.E. 140 Hypoid Lubricant.

Chain should be oiled lightly (DO NOT GREASE). Excess oil or grease will collect road grit and cause excessive chain wear.

NOTE: Fill electric-hydraulic power unit reservoir to oil level line with the boom down. Use Automatic Transmission Fluid Type "B" (DEXRON). Below 20 deg. F add 3/4 pt. Kerosene. Check periodically or when boom action is affected.

ENTURO MFG., INC. CINCINNATI, OHIO		INSTALLATION INFO	10-14-97A	C200
	ET6KM	SUPERCEDES 4-8-96	l19116	

INSTALLATION INSTRUCTIONS

MODEL(S): ET6KR

CAPACITY-REFERENCE DRAWINGS 119113 AND 119114

6-10-14 FT BOOM - 400 LBS @ 14 FT REACH - 2200 LBS @ 2.5 FT REACH 10-18 FT BOOM - 300 LBS @ 18 FT REACH - 1400 LBS @ 3.5 FT REACH

12 VOLT ELECTRIC

STANDARD EQUIPMENT

MOMENT OVERLOAD FUNCTION SHUT-OFF SYSTEM
CABLE OVERHAUL WEIGHT
SWIVEL SNATCH BLOCK
20 FT PLUG-IN PENDANT CONTROL
MASTER DISCONNECT SWITCH
65 FT (6-10-14) AND 75 FT (10-18) 3/16" WIRE ROPE AND HOOK WITH SAFETY LATCH
25 FT. OF #2 BATTERY CABLE PLUS 4 FT FROM CRANE TO DISCONNECT SWITCH

OPTIONAL EQUIPMENT

OUTRIGGERS - RECOMMENDED WITH VEHICLES OF 10,000 GVW OR LESS MOMENT OVERLOAD ALARM (MOMENT OVERLOAD FUNCTION SHUT-OFF SYSTEM WITHOUT ALARM IS STANDARD)

MOUNTING PEDESTAL - 36" HIGH

REFERENCE DRAWINGS	INSTALLATIONINSTRUCTIONS
119121 113497 114930	Select mounting location to clear 13 1/2" housing swing radius. Provide a strong and rigid mounting base. See installation drawings for typical construction of pedestal base for behind cab mounting and reinforcement for mounting on top of service body. Similar reinforcement is required for mounting crane on floor of truck or on 17340 pedestal.
	Drill eight clearance holes for 5/8" diameter mounting bolts (not provided). If battery cable is to be routed down through center of the quill and at the center of the base, underneath the floor, drill 7/8" diameter hole.
711105 15660	Route battery cable out center of base. Bolt base assembly in position. Assemble master disconnect switch to battery cables and mount in convenient spot. Connect long battery cable to battery. NOTE REQUIREMENTS FOR ADEQUATE WIRING & BATTERY
I19121 711006	Assemble boom and elevating cylinder (10-18 ft boom only) and wire rope to housing assembly. WARNING - be sure that breather cap is installed hydraulic power unit prior to operation.
18518 13509 13510	5. Install optional outriggers if required. Provide necessary reinforcement.

ENTURO MFG., INC. CINCINNATI, OHIO	MEG INC	INSTALLATION INFO	10-14-97A	C200
	CINCINNATI, OHIO	ET6KR	SUPERCEDES 4-8-96	l19117

OPERATING AND MAINTENANCE INSTRUCTIONS

MODEL(S): ET6KR

OPERATING INSTRUCTIONS

1. ELECTRIC WINCH

Controlled by plug-in remote pendant. NOTE - Snatch block must be used for loads in excess of 1200 lbs.

2. BOOM ELEVATION

Controlled by plug-in remote pendant. Electric-hydraulic power unit allows full power lifting and lowering of capacity loads.

3. POWER ROTATION

Controlled by plug-in remote pendant. Crane can be rotated continuously 360 deg. or more under full crane loading.

4. CONTROLPRIORITY SYSTEM

As a built-in safety feature, the control priority system allows the operator to perform only one major and one minor function at any one time. Major functions are rotation right and left, winch up, and boom up. Minor functions are winch down and boom down.

WINCH UP has priority over BOOM UP and ROTATION

BOOM UP has priority over ROTATION

BOOM DOWN and WINCH DOWN can be operated with any other function.

MOMENT OVERLOAD FUNCTION SHUT-OFF SYSTEM

A moment overload shut-off system is also provided as a built-in safety feature. When the system detects a moment overload condition, it disables the winch up and boom down functions. The winch down, boom up, and rotation functions remain operational to allow the operator to eliminate the overload condition.

6. TELESCOPING BOOM

The 6-10-14 ft. and 10-18 ft. booms can be manually extended. Toggle pin(s) lock the boom in the selected position.

7. MASTER DISCONNECT SWITCH

The master disconnect switch cuts supply current from the battery and should be turned OFF when the crane is not in use.

8. CAPACITY INDICATOR

Select boom reach and angle allowable for load by using the capacity indicator arrow and chart on either side of the boom.

MAINTENANCE

Crane requires only periodic lubrication. Swivel (rotation) bearings are self-lubricating.

Fill Winch and Rotation Gear Boxes to level of plug with S.A.E. 140 Hypoid Lubricant.

Chains should be oiled lightly (DO NOT GREASE). Excess oil or grease will collect road grit and cause excessive chain wear.

Moly filled chassis grease should be applied by pressure grease gun to fittings on each end of rotation worm shaft and on rotation gear teeth through the provided ports in the crane housing.

NOTE: Fill electric-hydraulic power unit reservoir to oil level line with the boom down. Use Automatic Transmission Fluid Type "B" (DEXRON). Below 20 deg. F add 3/4 pt. Kerosene. Check periodically or when boom action is affected.

ENTURO MFG., INC. CINCINNA		INSTALLATION INFO	10-14-97A	C200
	CINCINNATI, OHIO	ET6KR	SUPERCEDES 4-8-96	I19118

IMPORTANT


ADEQUATE WIRING IMPERATIVE FOR PROPER OPERATION

- 1. PROPER GROUND PATH SEE DWG 15660
- 2. CURRENT DRAW IS SEVERAL HUNDRED AMPERES ADEQUATE WIRE SIZE AND BATTERY CAPACITY IS ABSOLUTELY ESSENTIAL (SEE CHART BELOW.)

MINIMUM WIRE GAUGE AND BATTERY SIZE										
MODEL		TOTAL LENGTH OF CABLE (FT)*							12 VOLT BATTERY REQUIREMENTS	
	0-20	21-25	26-30	31-40	41-50	51-60	61-70	71-80	CCA (A)**	RC (MIN)***
CE6K CT2000 CT2003/4/5 DT7K	#4	#4	#2	#2	#1	#0	#0	#00	350	100
ET5500MPB ET5500R ET6KMPB ET6KR ET10K	#2	#2	#1	#0	#00	NOTRECOMMENDED		450	100	
ET10KX	#2	#2	#1	#0	#00	NOTRECOMMENDED 550 150			150	
ET25K ET25KX	SEED	RAWING I2	24600 FOR	CABLEAN	IDBATTE	RYREQUII	REMENTS	3		

- * INCLUDES GROUND CABLE
- ** CCA=COLD CRANKING AMPS AT 0' F.
 THE CCA RATING IS A MEASURE OF THE ABILITY OF THE BATTERY TO DELIVER A <u>HIGH CURRENT</u> FOR A SHORT PERIOD OF TIME.
- *** RC=RESERVE CAPACITY IN MINUTES AT 25 AMPS AND 80' F.
 THE RC RATING IS A MEASURE OF THE <u>PERIOD OF TIME</u> THE BATTERY CAN SUPPLY A GIVEN CURRENT WITHOUT RECHARGING.

VENTURO	MFG., INC.	CABLE & BATTERY	8-10-00R	C200
ENTOR	CINCINNATI, OHIO	CE, CT, DT, & ET	3-3-99Q	711105

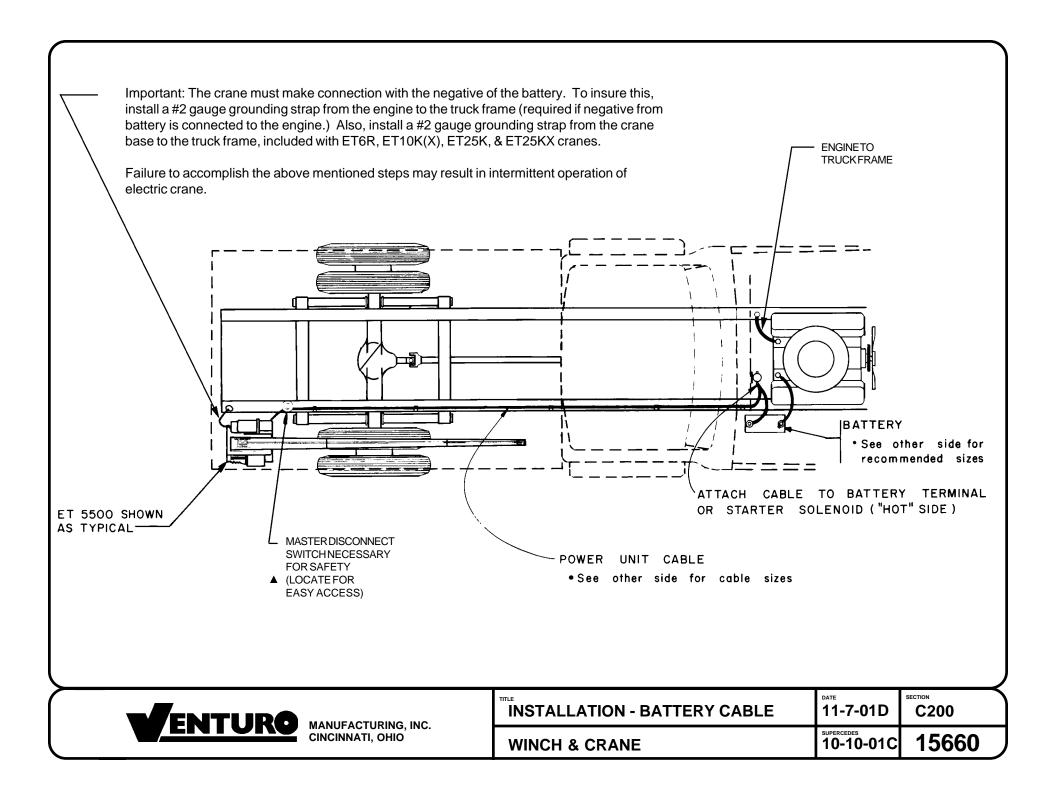


SELECTION

The chart below shows the maximum working load and breaking strength of 7 X 19 Galvanized AIRCRAFT Grade Wire Rope in various diameters. The breaking strength is 3-1/2 times the maximum working load. Do not use wire rope with a Maximum Working Load rating less than the single line capacity of the crane. Use of wire rope diameter larger than the size furnished with the crane will reduce the fatigue life of the wire rope.

WIRE ROPE DIAMETER	MAXIMUM WORKING LOAD	BREAKING STRENGTH
1/8"	570 lbs	2000 lbs
5/32"	800 lbs	2800 lbs
3/16"	1200 lbs	4200 lbs
7/32"	1600 lbs	5600 lbs
1/4"	2000 lbs	7000 lbs
5/16"	2800 lbs	9800 lbs
3/8"	4114 lbs	14400 lbs

INSTALLATION

- 1. Unwind coil of rope by rolling it along floor. This will prevent kinking.
- 2. Most VENTURO Cranes are provided with a slot in the winch drum side plate for attaching the end of the wire rope with a stop collar. A hole in the housing allows access for the end of the wire rope when inserted thru the slot.
 - The ET20K(X) & ET25K(X) Cranes have a clamp built into the winch drum and do not use a stop collar.
- 3. THERE MUST ALWAYS BE AT LEAST (3) TURNS OF WIRE ROPE ON THE DRUM WHEN UNDER LOAD.

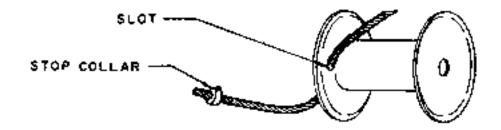




MINIMUM VOTAGE TEST ET5500, ET6K(M/R), ET8100, ET10K(X)

ONE OF THE MOST COMMON ELECRICAL PROBLEMS ENCOUNTERED ON ELECTRICAL CRANES IS INSUFFICIENT VOLTAGE AT THE MOTOR WHEN DRAWING THE LARGE CURRENT THAT EXISTS AT FULL LOAD.

TO ISOLATE THIS PROBLEM PERFORM THE MINIMUM VOLTAGE TEST BELOW:

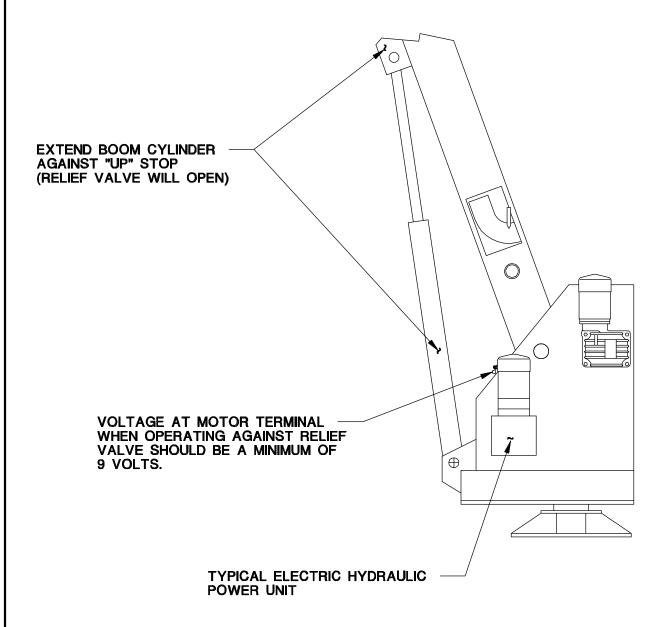




TITLE	DATE
MINIMUM VOLTAGE TEST	10-16-97D
ET5500, ET6K(M/R),	SUPERSEDES
ET8100, ET10K(X)	4-1-96C

SECTION C355

800306

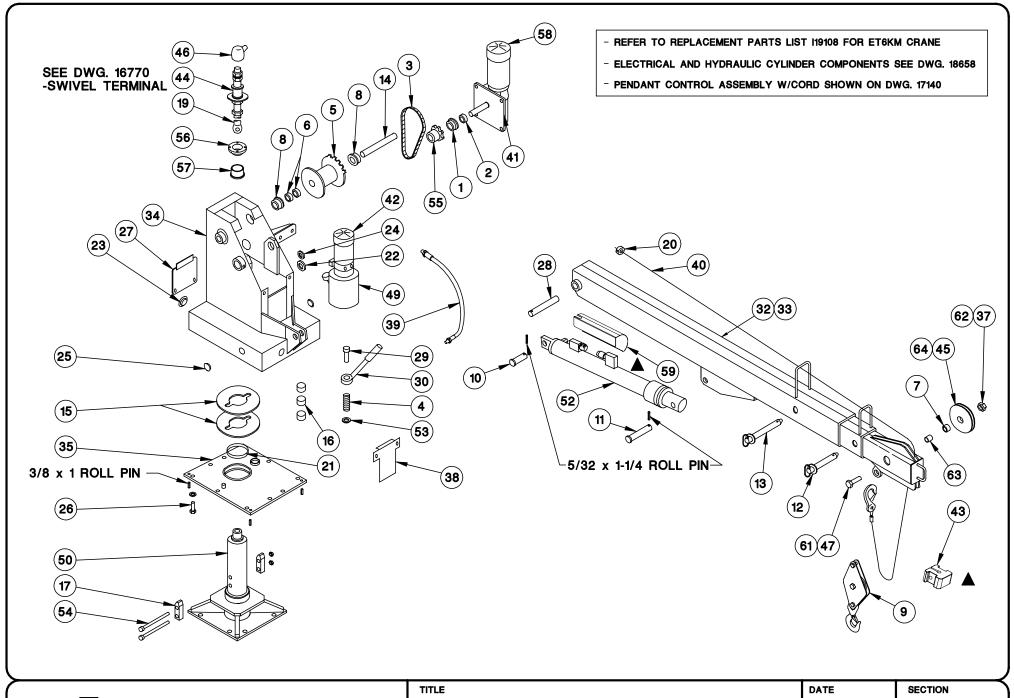

ENTURO	MANUFACTURING, INC.
--------	---------------------

1121 2710 21112111 1711110	SUPERSEDES	
REPLACEMENT PARTS	10-30-01F	C400

ITEM #	PART#	DESCRIPTION	ITEM #	PART#	DESCRIPTION
1	00181-3	FLANGED BEARING - 3/4" BORE x 1-7/8" O.D.	41	16105	WINCHPOWERUNIT
2	00210	THRUST COLLAR - 3/4" BORE	42	16143-2	MOTOR COVER - BLACK
3	00867-1	WINCH DRIVE CHAIN (NO CONNECTING LINK) 50 LINKS	43	16735	HEADACHE BALLASSEMBLY (INCLUDES HARDWARE)
4	11889	SPRING '	44	16770	SWIVELTERMINAL
5	01149	CABLE DRUM	45	17007	CABLE SHEAVE - 6" DIA - 6/14 BOOM
6	01158	THRUST COLLAR - MAIN SHAFT - 1" BORE	46	17011	BOOT-SWIVELTERMINAL
7	01272-1	BUSHING - BOOM SHEAVE - 6/14 & 10/18 BOOMS	47	17059-4	SHEAVE AXLE - 6/14 BOOM
8	01299	FLANGED BEARING - 1" BORE x 2" O.D MAIN SHAFT	48	17140 🛆	PENDANTCONTROLASSEMBLY
9	13149	SWIVELSNATCHBLOCK	49	17252	HYDRAULIC POWER UNIT (W/MOTOR COVER)
10	13401-1	CLEVIS PIN (3/4" O.D. x 2" LONG) - CYLINDER BASE	50	18830	QUILLASSEMBLY
11	13401-2B	CLEVIS PIN (3/4" O.D. x 3-1/4" LONG) - CYLINDER ROD	51	18542 🛕	BOOT-MOTOR TERMINAL
12	19258-3	BOOM PIN ASSY (SHORT LANYARD) - 6/14 & 10/18 BOOMS	52	18671-1 <u></u>	ELEVATION CYLINDER ASSEMBLY
13	19258-2	BOOM PIN ASSEMBLY (LONG LANYARD) - 6/14 BOOM	53	!FWSH-075	FLAT WASHER - 3/4"
14	13407	MAIN SHAFT (1" O.D. x 7-5/16" LONG) - CABLE DRUM	54	13453	HIGHSTRENGTHTHRU-BOLTWITHHEXNUT
15	13413	BRAKEDISC	55	15999	DRIVE SPROCKET - 3/4" BORE 40B10
16	18834	FRICTIONPUCK	56	17372	UPPERBEARINGHOUSING
17	13416	KEYDISCBRAKE	57	15681	UPPER BEARING-QUILL
18	-	-	58	16143-1	MOTOR COVER - BLACK
19	13448-24	SWIVELPIGTAIL	59 ▲	19126	COVER-ELEVATION CYLINDER
20	13463-1	STOPSLEEVE	60	-	-
21	20179	BEARING-LOWER BEARING PLATE	61	!HHCS06311150	HEX HEAD CAP SCREW - 5/8"-11 x 1-1/2" - 10/18 BOOM
22	14775	GROMMET (1/2" I.D.) - RUBBER	62	!JNUT-06311N	NYLON LOCK JAMNUT - 5/8"-11 - 10/18 BOOM
23	14858-2	SNAP IN PLUG - 2" DIA	63	13168-3	SLEEVE - 10/18 BOOM
24	14883	GROMMET (3/8" I.D.) - RUBBER	64	13404	SHEAVE - 5-1/2" DIA - 10/18 BOOM
25	RL-644	INSULATING PLUG-1"HOLE	65	-	-
26	!HHCS05013150	HEX HEAD CAP SCREW - 1/2"-13 x 1-1/2" GR. 5	66	-	-
27	15676	BACKCOVER	67	-	-
28	13406	PIVOT PIN (1-1/4" O.D. x 7" LONG) - BOOM	68	-	-
29	13454	BRAKEBOLT	69	-	-
	13455	BRAKE HANDLE	70	-	-
31	13546-1-R 🛆	6-POLE SOCKET	71	19140-6/14	FIELD SERVICE LABEL KIT - ET6KM - 6 - 14 FT BOOM
32	20421	BOOM ASSEMBLY - 6-10-14 FT.	72	19140-10/18 🛕	FIELD SERVICE LABEL KIT - ET6KM - 10 - 18 FT BOOM
33	14861-1	BOOM ASSEMBLY - 10-18 FT.	73	-	-
34	18838 <u>A</u> 18803 <u>A</u>	HOUSING ASSEMBLY	74	-	-
35	18803 🖄	LOWER BEARING PLATE	75	-	-
36	-	-	76	-	-
37	!JNUT-07510N	NYLON LOCK JAMNUT - 3/4"-10 - 6/14 BOOM	77	-	-
38	18677	FRONTCOVER	78	-	-
39	19695	HOSEASSEMBLY	79	-	-
40	15810-3/16-XX	3/16" DIA WIRE ROPE & EYE HOOK ASSEMBLY	80	-	-

⚠ ITEM NOT SHOWN ON DRAWING I19109


⚠ THESE PARTS ARE A MATCHED SET AND ARE NOT NORMALLY SOLD AS REPLACEMENT PARTS

⚠ HYDRAULIC CYLINDER PARTS SEE DRAWING I18658

REPLACEMENT PARTS DRAWING REF I19109



REPLACEMENT PARTS	10-30-01L	C400
ET6KM	7-24-01K	l19108

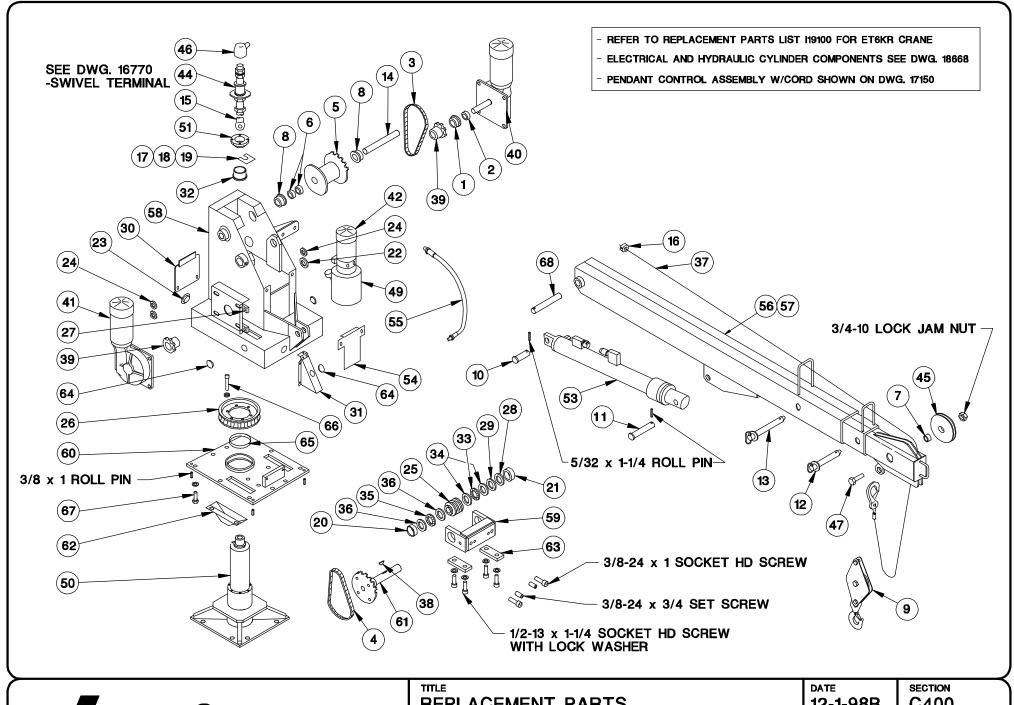

ENTURO MANUFACTURING, INC.	REPLACEMENT PARTS	12-1-98B	C400
CINCINNATI, OHIO	ET6KR	SUPERSEDES 10-14-97A	I19101

1 00181-3	ITEM#	PART#	DESCRIPTION	ITEM#	PART#	DESCRIPTION
2 00210	1		FLANGED BEARING - 3/4" BORE x 1-7/8" O D	41		ROTATION POWER LINIT
3 0.0867-1	2					
4 00867-3 CABLE DRUM 10 CONNECTING LINK) 56 LINKS 44 16770 SWIVEL TERMINAL CABLE DRUM 45 17007 CABLE SHEAVE - 6" DIA 01158 THRUST COLLAR - MAIN SHAFT - 1" BORE 45 17007 CABLE SHEAVE - 6" DIA 01158 THRUST COLLAR - MAIN SHAFT - 1" BORE 46 17011						
5 01149 CABLE DRUM 45 17007 CABLE SHEAVE - 6" DIA 6 01158 THRUST COLLAR - MAIN SHAFT - 1" BORE 46 17011	4			-		
6 01158 THRUST COLLAR - MAIN SHAFT - 1" BORE 46 17011	5					-
7	6			-		
8 01299 FLANGED BEARING -1" BORE x 2" O.D MAIN SHAFT 48 17150 ⚠ PENDANT CONTROL ASSEMBLY 9 13149 SWIVEL SNATCH BLOCK 49 17252 HYDRAULIC POWER UNIT (W /MOTOR COVER) 10 13401-1 CLEVIS PIN (3/4" O.D. x 2" LONG) - CYLINDER ROD 51 17372 BEARING HOUSING 12 19258-3 BOOM PIN ASSEMBLY (HORT LANYARD) 52 18542 MoOT - MOTOR TERMINAL 13 19258-2 BOOM PIN ASSEMBLY (LONG LANYARD) 53 18677 FRONT COVER 14 13407 MAIN SHAFT (1" O.D. x 7-5/16" LONG) - CABLE DRUM 54 18677 FRONT COVER 15 13448-11 SWIVEL PICTALL 55 18679 HOSE ASSEMBLY 16 13463-1 STOP SLEEVE 56 18681 BOOM ASSEMBLY - 6-10-14 FT. 17 14159-2 M. SHIM - 1-1/2" SO. x. 0.042" THK 58 18820 M. HOUSING ASSEMBLY 19 14159-3 M. SHIM - 1-1/2" SO. x. 0.05" THK 59 18844 M. WORM HOUSING ASSEMBLY 19 14159-4 M. SHIM - 1-1/2"						
9	8					PENDANT CONTROL ASSEMBLY
10				49		HYDRAULIC POWER UNIT (W /MOTOR COVER)
11				-		,
12	11	13401-2B		51		
13		19258-3		52	18542 ∕↑	BOOT - MOTOR TERMINAL
15 13448-11 SWIVEL PIGTAIL 55 18679 HOSE ASSEMBLY 16 13463-1 STOP SLEEVE 56 18681 BOOM ASSEMBLY - 6-10-14 FT. 17 14159-2	13	19258-2		53		ELEVATION CYLINDER ASSEMBLY
16	14	13407	MAIN SHAFT (1" O.D. x 7-5/16" LONG) - CABLE DRUM	54	18677	FRONT COVER
17	15	13448-11	SWIVEL PIGTAIL	55	18679	HOSE ASSEMBLY
18 14159-3	16	13463-1	STOP SLEEVE	56	18681	BOOM ASSEMBLY - 6-10-14 FT.
19 14159-4	17	14159-2 🗥	SHIM - 1-1/2" SQ. x .016" THK	57	14861-1	BOOM ASSEMBLY - 10-18 FT.
19 14159-4	18	14159-3 📶	SHIM - 1-1/2" SQ. x .042" THK	58	18820 🖄	HOUSING ASSEMBLY
21 14341-5 BEARING (1-1/4" I.D.) - WORM SHAFT 61 18860 SPROCKET AND SHAFT ASSEMBLY 22 14775	19	14159-4 🛆		59	18844	WORM HOUSING ASSEMBLY
22 14775	20	14341-3	BEARING (1-1/2" I.D.) - WORM SHAFT	60	18855 🕭	LOWER BEARING PLATE
23 14858-2 SNAP IN PLUG - 2" DIA 63 18875 WASHER PLATE 24 14883	21	14341-5	BEARING (1-1/4" I.D.) - WORM SHAFT	61	18860	SPROCKET AND SHAFT ASSEMBLY
24 14883	22	14775 🛆	GROMMET (1/2" I.D.) - RUBBER	62	18866	CHAIN COVER - BEARING PLATE
25	23	14858-2	SNAP IN PLUG - 2" DIA	63	18875	WASHER PLATE
26	24	14883 🛆	GROMMET (3/8" I.D.) - RUBBER	64	RL-644	INSULATING PLUG - 1" HOLE
27	25	15650		65	15645	BEARING - LOWER BEARING PLATE
28 15675-1 ⚠ SHIM WASHER - 1-1/4" I.D. x .005" THK 68 13406 PIVOT PIN (1-1/4" O.D. x 7" LONG) - BOOM 29 15675-2 ⚠ SHIM WASHER - 1-1/4" I.D. x .010" THK 69 - - 30 15676 BACK COVER 70 - - 31 15678 COVER - ROTATION CHAIN 71 - - 32 15681 UPPER BEARING - QUILL 72 - - 33 15696 NEEDLE THRUST BEARING 73 - - 34 15697 THRUST RACE - ROTATION WORM 74 - - 35 15698 NEEDLE THRUST BEARING 75 - -	26	15651	BULL GEAR	66		3/8" SOCKET HEAD CAP SCREW - MODIFIED
29 15675-2	27	15664	NUT BAR - ROTATION POWER UNIT	67	!HHCS05013150	1/2"-13 x 1-1/2" HEX HEAD CAP SCREW GR. 5
30 15676 BACK COVER 70 - - 31 15678 COVER - ROTATION CHAIN 71 - - 32 15681 UPPER BEARING - QUILL 72 - - 33 15696 NEEDLE THRUST BEARING 73 - - 34 15697 THRUST RACE - ROTATION WORM 74 - - 35 15698 NEEDLE THRUST BEARING 75 - -	28	15675-1 <u>↑</u>	SHIM WASHER - 1-1/4" I.D. x .005" THK	68	13406	PIVOT PIN (1-1/4" O.D. x 7" LONG) - BOOM
31 15678 COVER - ROTATION CHAIN 71 - - 32 15681 UPPER BEARING - QUILL 72 - - 33 15696 NEEDLE THRUST BEARING 73 - - 34 15697 THRUST RACE - ROTATION WORM 74 - - 35 15698 NEEDLE THRUST BEARING 75 - -	29	15675-2 🗥	SHIM WASHER - 1-1/4" I.D. x .010" THK	69	-	-
32 15681 UPPER BEARING - QUILL 72 - - 33 15696 NEEDLE THRUST BEARING 73 - - 34 15697 THRUST RACE - ROTATION WORM 74 - - 35 15698 NEEDLE THRUST BEARING 75 - -	30	15676	BACK COVER		=	-
33 15696 NEEDLE THRUST BEARING 73 - - 34 15697 THRUST RACE - ROTATION WORM 74 - - 35 15698 NEEDLE THRUST BEARING 75 - -	31	15678	COVER - ROTATION CHAIN	71	-	-
34 15697 THRUST RACE - ROTATION WORM 74 - - 35 15698 NEEDLE THRUST BEARING 75 - -	32	15681	UPPER BEARING - QUILL		-	-
35 15698 NEEDLE THRUST BEARING 75	33	15696	NEEDLE THRUST BEARING	73	-	-
	34	15697	THRUST RACE - ROTATION WORM	74	-	-
■ 36 15699 THRUST RACE - ROTATION WORM 176 - -	35	15698	NEEDLE THRUST BEARING		-	-
	36	15699	THRUST RACE - ROTATION WORM	-	-	-
37 15810-3/16-XX 3/16" DIA WIRE ROPE & EYE HOOK ASSEMBLY 77 - -	37	15810-3/16-XX	3/16" DIA WIRE ROPE & EYE HOOK ASSEMBLY	77	-	-
38 15929 <u>↑</u> WOODRUFF KEY - 1/4" x 1-1/4" 78 - -	38	15929 🗥		-	-	-
39 15999 DRIVE SPROCKET - 3/4" BORE 40B10 79 - -	39		DRIVE SPROCKET - 3/4" BORE 40B10		-	-
40 16105 WINCH POWER UNIT 80	40	16105	WINCH POWER UNIT	80	-	

⚠ ITEMS ONLY AVAILABLE AS PART OF 15828 SMALL PARTS KIT

★ THESE PARTS ARE A MATCHED SET AND ARE NOT NORMALLY SOLD AS REPLACEMENT PARTS

REPLACEMENT PARTS DRAWING REF I19101


⚠ HYDRAULIC CYLINDER PARTS SEE DRAWING 18668

SN: 42000 & UP

⚠ ITEM NOT SHOWN ON DRAWING I19101


ENTURO	MANUFACTURING, INC. CINCINNATI, OHIO
	CINCINNATI, OHIO

REPLACEMENT PARTS	10-14-97B	C400
ET6KR	8-22-97A	l19100

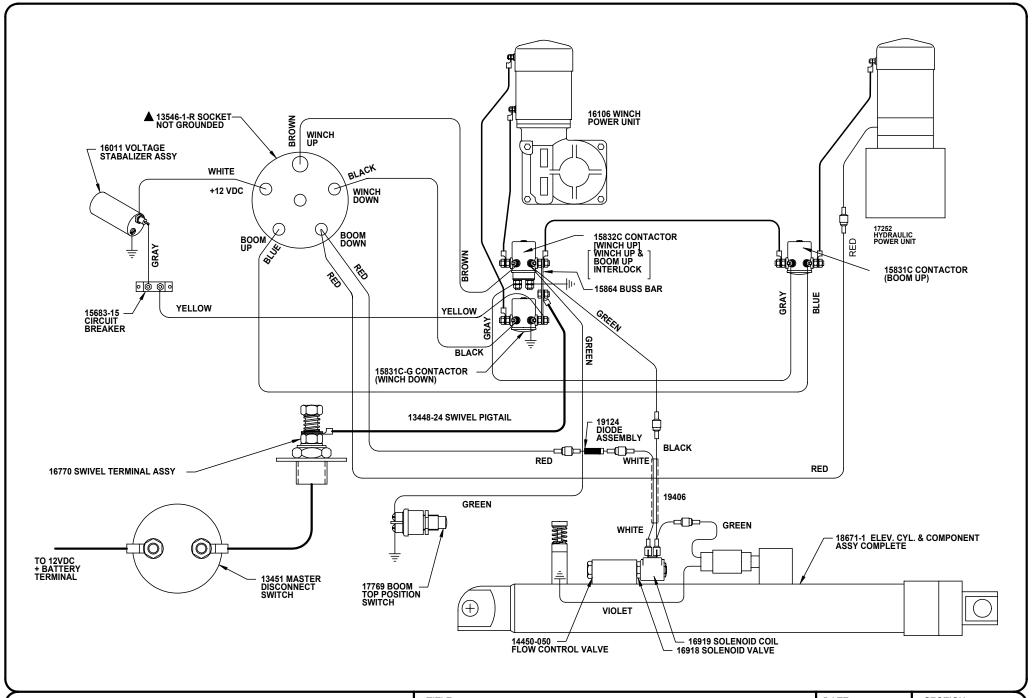


ENTURO	MANUFACTURING, INC. CINCINNATI, OHIO
--------	---


PARTS LIST & WIRING DIAGRAM	5-29-01G	C400
ET6KM CRANE	supersedes 4-30-98F	18658

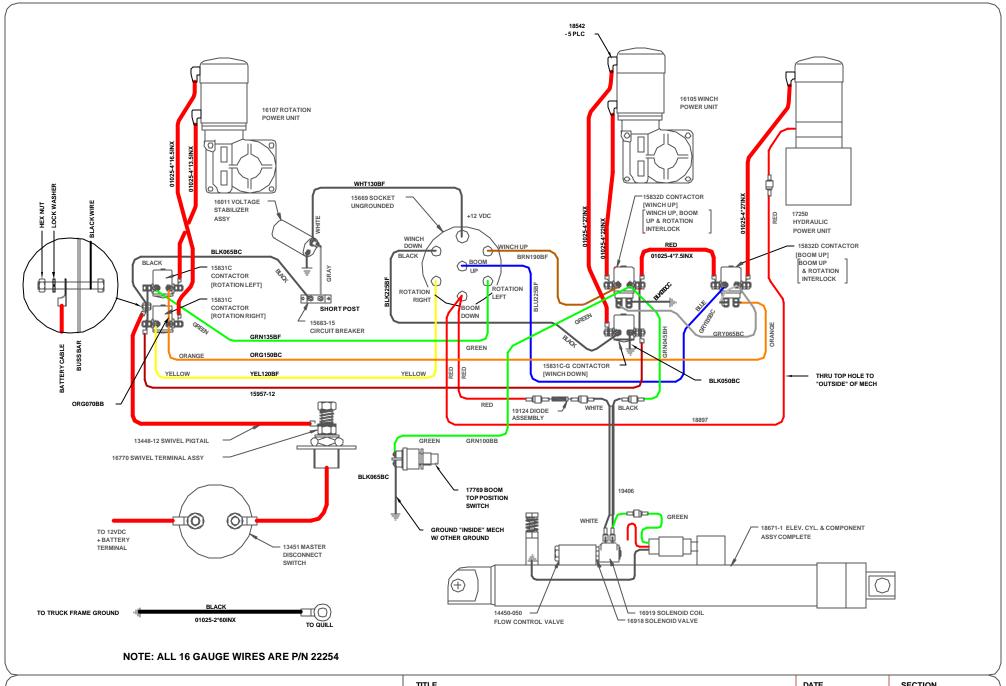



WIRING DIAGRAM	7-9-04F	C400
ET6KR CRANE	supersedes 4-30-98E	I18668

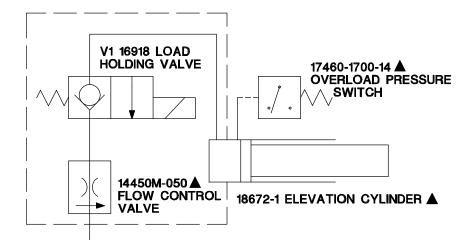


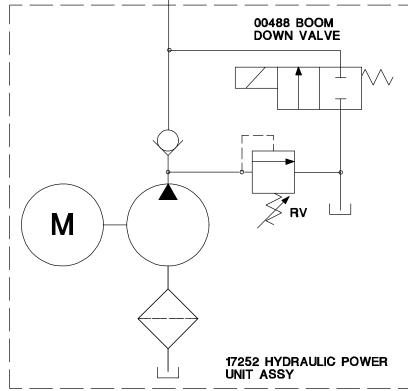


BOOM LENGTH	PRESSURE SETTINGS PSI		
FEET	RV	PS	
6-10-14	2100 🛦	1700 🛦	

WENTURO	MANUFACTURING, INC.
	CINCINNATI, OHIO


HYDRAULIC SYSTEM DIAGRAM	10-2-97D SUPERSEDES	C400
ET6KM/R	9-27-96C	18667

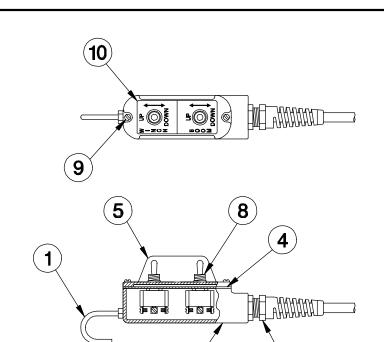

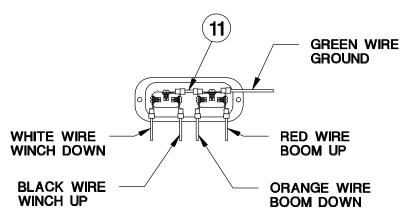


6

FOR OLDER MODELS (PRIOR TO ET6KM) REQUIRING A COMMON GROUND, THE GROUND SCREW MUST BE USED

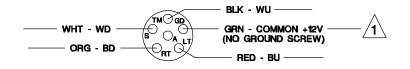


PLUG - BACKSIDE VIEW

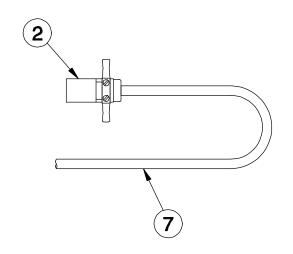

11	1	19305	2SW PENDANT CORD JUMPER
10	1	13557	DECAL, CONTROL, 2S PENDANT
9	2	IPHCS#0832050	PHCS 8-32 x 1/2
8	2	13763	TOGGLE SWITCH
7	1	17141-xx	CORD ASSY (xx = LENGTH IN FT.)
6	1	25534	PLASTIC 3/4" STRAIN RELIEF
5	1	15531	PENDANT COVER
4	1	14948	GASKET 3/4"
3	1	14321	ENCLOSURE 3/4"
2	1	13546-2	PLUG - 6 POLE
1	1	11557	PENDANT HOOK
ITEM	QTY	PART NO.	DESCRIPTION



···-	DATE 12-11-97B	SECTION C400
2 FUNCTION CRANES	SUPERSEDES 5-19-97A	17140

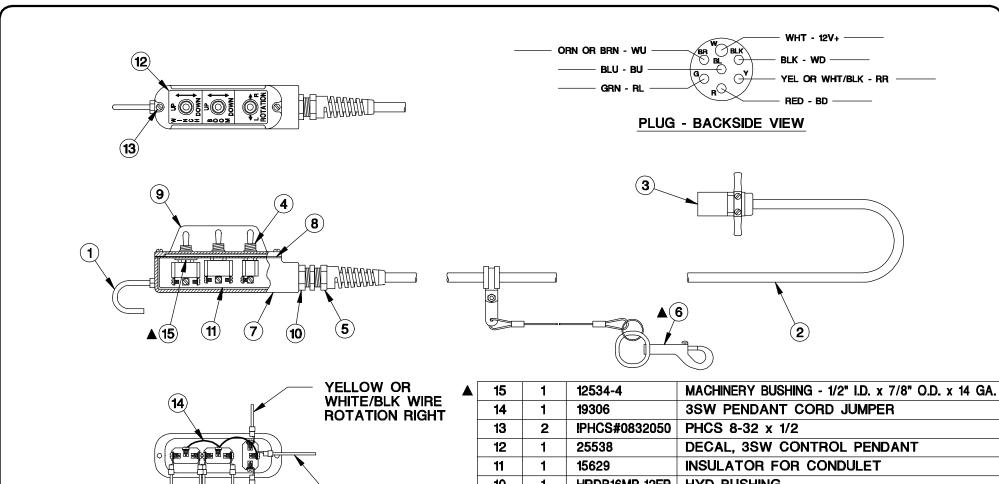

WHITE WIRE COMMON

GREEN WIRE ROTATION LEFT

BLUE WIRE

BOOM UP

RED WIRE BOOM DOWN

14	1	19306	3SW PENDANT CORD JUMPER
13	2	IPHCS#0832050	PHCS 8-32 x 1/2
12	1	25538	DECAL, 3SW CONTROL PENDANT
11	1	15629	INSULATOR FOR CONDULET
10	1	HRDB16MP-12FP	HYD BUSHING
9	1	15626	PENDANT COVER
8	1	25625	GASKET 1"
7	1	25624	ENCLOSURE 1"
6	1	15913-2	PHAN, CLAMP AND TETHER ASSY
5	1	25534	PLASTIC 3/4" STRAIN RELIEF
4	3	13763	TOGGLE SWITCH
3	1	24348	PLUG - 7 POLE
2	1	17151-xx	CORD ASSY (xx = LENGTH IN FT.)
1	1	11557	PENDANT HOOK
ITEM	QTY	PART NO.	DESCRIPTION
	13 12 11 10 9 8 7 6 5 4 3 2	13 2 12 1 11 1 10 1 9 1 8 1 7 1 6 1 5 1 4 3 3 1 2 1 1 1	13 2 IPHCS#0832050 12 1 25538 11 1 15629 10 1 HRDB16MP-12FP 9 1 15626 8 1 25625 7 1 25624 6 1 15913-2 5 1 25534 4 3 13763 3 1 24348 2 1 17151-xx 1 1 11557




BLACK WIRE WINCH DOWN

ORANGE OR

BROWN WIRE

WINCH UP

	2-6-98E	SECTION C400
3 FUNCTION CRANES	SUPERSEDES 1-30-98D	17150

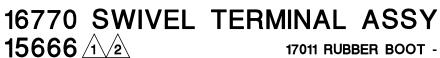

13450-13.5 s

17011 RUBBER BOOT - REF

13448-XX SWIVEL PIGTAIL (NOT INCLUDED WITH 16770)

ITEM	QTY	PART NO.	DESCRIPTION
1	1	15653-60	PIGTAIL & STUD ASSY
2	1	13447-13.5	PIGTAIL & STUD ASSY
*3	3	16771-1	FIBER WASHER
			1/2" I.D. x 15/16" O.D. x 1/16" THK
*4	1	13410	INSULATING BUSHING
5	1	13467	3/4" INVERTED FLARE NUT - MODIFIED
6	1	!FWSH-100SAE	FLAT WASHER
			1 1/8" I.D. x 2 1/8" O.D. x 1/8" THK
*7	1	16771-2	FIBER WASHER
			1/2" I.D. x 1 1/4" O.D. x 1/16" THK
*8	1	16770*7	BRASS WASHER
			1/2" I.D. x 1 1/4" O.D. x 5/64" THK
*9	1	19800 ▲	BRASS JAM NUT - 1/2"-13NC - MODIFIED▲
*10	1	16770*11	TEFLON WASHER
			1/2" I.D. x 3/4" O.D. x 1/32" THK
* 11	1	16770*10	BRASS WASHER
			1/2" I.D. x 11/16" O.D. x 1/32" THK
*12	1	LC-063HJ-1	SPRING
			.66" O.D. x .63" W x 5/8" F.L.
*13	1	!JNUT-05013N	NYLON INSERT-JAMNUT - 1/2"-13
*14	1	12534-4	MACHINERY BUSHING
			1/2" I.D. x 7/8" O.D. x 14 GA THK
*15	1	LOCTITE-24205	LOCTITE CAPSULE GRADE 242 BLUE
*16	1	16770	REPL. PARTS DWG (THIS PAGE)



16772 SERVICE PARTS KIT CONVERTS 15666 TO 16770

16770 REPLACES & IS INTERCHANGEABLE WITH 15666

13447-13.5 PIGTAIL STUD ASSY REQ'D WITH 13450-13.5 ASSY USED ON EARLY MODEL ET5500M/(PB) CRANES

SECURE WITH LOCTITE 242 BLUE

TORQUE TO 30 FT-LBS, THEN TIGHTEN SET SCREW. A

TIGHTEN UNTIL ONE THREAD IS VISIBLE ABOVE THE NUT & ENSURE THAT SPRING IS NOT FULLY COMPRESSED



MFG., INC. CINCINNATI, OHIO

REPLACEMENT PARTS	
ET5500, ET6KM/R,	

ET8100, ET10K(X)

SECTION

(12)

(11)

(10)

/4**/**5\(9)

(8)

(7

/**4**\(5

(6)

(3)


(14)

/3(2(1)

<u>13/6</u>\

1-14-98E

DATE C455 2-21-02F **SUPERSEDES**

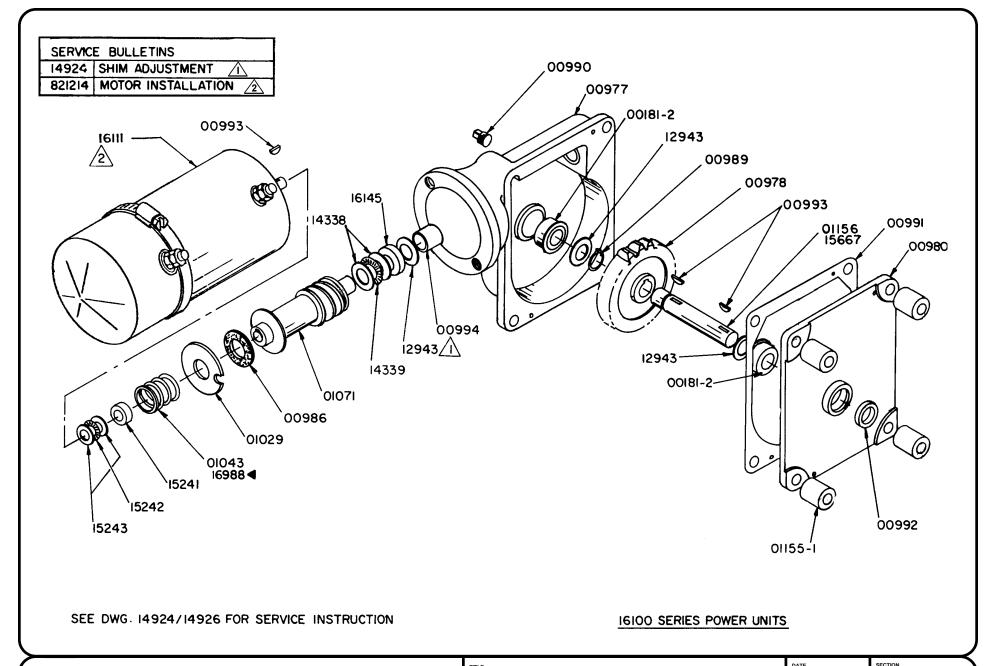



REPLACEMENT PARTS	6-17-98D	C400
WINCH & CRANE	10-3-88C	l16100

REPLACEMENT PARTS LIST - 16100 ELECTRIC POWER UNIT

MODEL(S): ET5500MPB, ET6KM, ET6KR

PART NO.	DESCRIPTION
16101 16102 16105 16106 16107	POWER UNIT - LONG SHAFT - ET5500R WINCH APPOWER UNIT - SHORT SHAFT - ET5500R ROTATION POWER UNIT - LONG SHAFT - CA 2000, CT 2003, WA/SL 3000 (WITH SPACERS) POWER UNIT - LONG SHAFT - ET5500 WINCH (WITHOUT SPACERS) POWER UNIT - SHORT SHAFT - ET5500R ROTATION
00181-2 00977 00978 00980 * 00986	FLANGE BEARING - 3/4" BORE x 1 3/4" O.D. GEAR CASE (INCLUDES 00994 BUSHING) WORM GEAR BASE PLATE BRAKE DISC
* 00989 00990 * 00991 * 00992 * 00993	LOCK RING OIL PLUG - 1/4" PIPE GASKET OIL SEAL KEY - #9 WOODRUFF
00994 01029 01043 <u>▲</u> 01071 01155-1	BUSHING BRAKE PLATE BRAKE SPRING (16102 & 16107 ROTATION POWER UNIT ONLY) WORM SHAFT SPACER (16105 ONLY)
01156 * 12943-1 △ * 12943-2 △ * 12943-3 △ 14338	WORM GEAR SHAFT - 3/4" x 5 3/16" LONG (16105 & 16106 ONLY) SHIM WASHER005" THICK (AS REQUIRED) SHIM WASHER015" THICK (AS REQUIRED) SHIM WASHER030" THICK (AS REQUIRED) NEEDLE THRUST RACE 3/4" I.D.
14339 15241 15242 15243 15667	NEEDLE THRUST BEARING 3/4" I.D. SPACER (INSTALL NEXT TO BRAKE PLATE) NEEDLE THRUST BEARING 5/8" I.D. NEEDLE THRUST RACE .092" x 5/8" I.D. WORM GEAR SHAFT - 3/4" x 4 3/16" LONG (16102 & 16107 ONLY)
16111 ▲ 16145 16988 ▲	MOTOR - 12 VOLT 4 1/2" DIAMETER SPACER BRAKE SPRING (16101, 16105 & 16106 WINCH POWER UNITS ONLY)
14889 15290	MOTOR REPAIR KIT SMALL PARTS KIT (INCLUDES ITEMS MARKED *)



riangle available only as part of 15290 small parts kit



16101 POWER UNIT REPLACED BY 16106 POWER UNIT 16102 POWER UNIT REPLACED BY 16107 POWER UNIT



🖄 REPLACE 30E & 16100 POWER UNITS AS FOLLOWS:

16105 REPLACES 11497

16106 REPLACES 11497NS & 16101

16107 REPLACES 16102




4 16111 MOTOR REPLACES 01024 E & F & 16112 MOTORS ON ALL 30E & 16100 SERIES POWER UNITS



16988 BRAKE SPRING REPLACES 01043 BRAKE SPRING ON 16101, 16105 & 16106 WINCH POWER UNITS ONLY



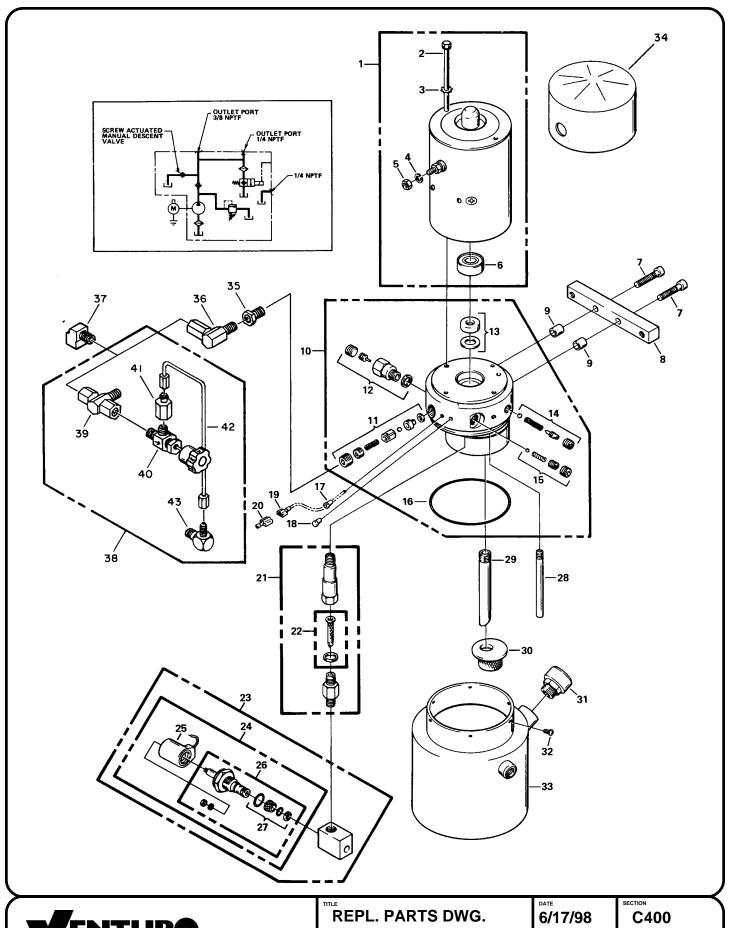

ENTURO MFG., CINCII

MFG., INC. CINCINNATI, OHIO REPL. PARTS DWG. 6/17/98 C400

17252/17253 HYD PU - 19518

REPLACEMENT PARTS LIST - 17252/17253 HYDRAULIC POWER UNIT

MODEL(S): ET5500MPB, ET5500R, ET6KM, ET6KR, H20E

ПЕМ	PARTNUMBER	DESCRIPTION
1 2 3 4 5 6 7 8	16940 07738 07737 07781 07625 02318 07879	MOTOR, ELECTRIC, 12 VDC SCREW, HEX HEAD CAP 1/4-20 X 6-1/2" WASHER, STAR 1/4" WASHER, LOCK 5/16" NUT, HEX 5/16-24 BEARING, BASE, MOTOR SCREW, SOCKET HEAD CAP, 5/16-18 X 1-1/2" BRACKET, PLATE MOUNT
9 10 11 12 13 14 15	01335 02965 03624 00076 02970 02222 00078 02352	BUSHING, PUMP MOUNTED, PLATE MOUNT PUMP ASSEMBLY, GEAR CODE 62 PARTS KIT, VALVE ASSEMBLY, POPPET/BALL CHECK PARTS KIT, MANUAL OVERRIDE PARTS KIT, SEAL AND GASKET PARTS KIT, RELIEF VALVE PARTS KIT, CHECK VALVE (DESCENDING) O-RING, INDUSTRIAL (3-5/8 X 3-7/8 X 1/8)
17 18 19 20 21 22 23 24	01393 04390 01695 01694 00200 03692 00506 00488	STRAIN RELIEF, NYLON INSULATOR STRAIN RELIEF, NYLON PLUG TERMINAL, INSULATED, MALE (ATTACHED TO ELECTRICAL LEAD ON VALVE) TERMINAL, INSULATED, FEMALE (SHIP LOOSE) FILTER ASSEMBLY, INLINE 4-1/8" LONG PARTS KIT, GASKET AND FILTER VALVE ASSEMBLY, 12 VDC, GROUNDED VALVE, 2 WAY-2 POSITION, 12 VDC, GROUNDED
25 26 27 28 29 30 31 32	00496 00263 00121 01494 01818 01134 03171 07703	COIL, 12 VDC, 2 WAY-2 POSITION, GROUNDED CARTRIDGE, 2 WAY-2 POSITION, 12 VDC, AND 24 VDC PARTS KIT, 2 WAY-2 POSITION, CARTRIDGE TUBE, RETURN, 1/8 NPT TUBE, SUCTION, 3/8 NPT SCREEN, FILTER (SUCTION) PLUG, VENT (PLASTIC) SCREW, THREAD FORMING 10-24 X 3/8"
33 34 35 36 37 38 39 40	06227 16143 HRDB6MP-4FP HELB4FP-4FX-90L HTEL4MJ-4MP-90 13548 60VC - 04 X 04 13548-V	RESERVOIR, 6" DIA. X 5" MOTOR COVER BOOT REDUCING BUSHING SWIVEL ADAPTER - ELBOW TUBE ADAPTER - MALE 90 DEG. CREEP VALVE KIT - NOT CURRENT PRODUCTION SWIVEL ADAPTER - TEE - NOT CURRENT PRODUCTION CREEP VALVE ASSEMBLY - NOT CURRENT PRODUCTION
41 42 43	HTAD4MJ-4FP 17541 HELB4MP-4FP-90	TUBE ADAPTER-FEMALE STRAIGHT-NOT CURRENT PRODUCTION TUBE ASSEMBLY-NOT CURRENT PRODUCTION STREET ELBOW-BRASS-NOT CURRENT PRODUCTION

STANDARD RELIEF VALVE SETTINGS

ET5500 5.5-9 & 8-14 FT BOOM 2500 PSI ET5500 10-18 FT BOOM 2700 PSI ET6K ALL BOOMS 2300 PSI H20E ALL BOOMS 2500 PSI

17252 POWER UNIT REPLACES AND INTERCHANGABLE WITH 16792, 16790, 16500, AND 15025 PWR UNITS ON ET5500 17253 POWER UNIT REPLACES AND INTERCHANGABLE WITH 16793, 16791, 16501, AND 15023 PWR UNITS ON H20E


 $17252\,POWER\,UNIT\,USED\,ON\,ET5500MPB\,SN\,17708\,\&\,UP,\,ET5500R\,SN\,41079\,\&\,UP,\,H20E\,SN\,12550\,\&\,UP,\,ET6KM\,SN\,72100\,\&\,UP,\,ET6KR\,SN\,42000\,\&\,UP$

WENTURO MFG	3 INC.	17252/17253 HYD PU	10-14-97C	C400	
	CINNATI, OHIO	-	4-8-96B	900309	$oldsymbol{J}$

	ACEMENT PARTS (S): ET6KM, ET6KR	S LIST - 18671-1 ELEVATING CYLINDER ASSEMBLY		
ITEM	PARTNUMBER	DESCRIPTION		
	18671-1	ELEVATING CYLINDER ASSEMBLY (2" BORE X 17" STROKE)		
1	18672-1	ELEVATING CLYINDER ONLY		
2	*	O-RING		
3	*	POLYURETHANE PACKING		
4	B13622	GLAND NUT		
5	*	ROD WIPER		
6	13694	ROD SPACER - 2" LONG		
7	B30225	WEARRING		
8	B34550	1/8 NPT LEVEL SEAL		
*	18672-1-SK	PACKING KIT (INCLUDES PARTS MARKED *)		
	5 4 3/4 DIA PIN HOLE 1 DIA	3 2 8 7 1 1/2 NPT PIPE PORT 17 STROKE PIN HOLE 24 1/8 RETRACTED CENTERS		

ENTURO MFG., INC		18671-1 ELEV CYL	6-17-98A	C400
	CINCINNATI, OHIO	-	4-8-96	l19119


MOUNTING HOLE TEMPLATE

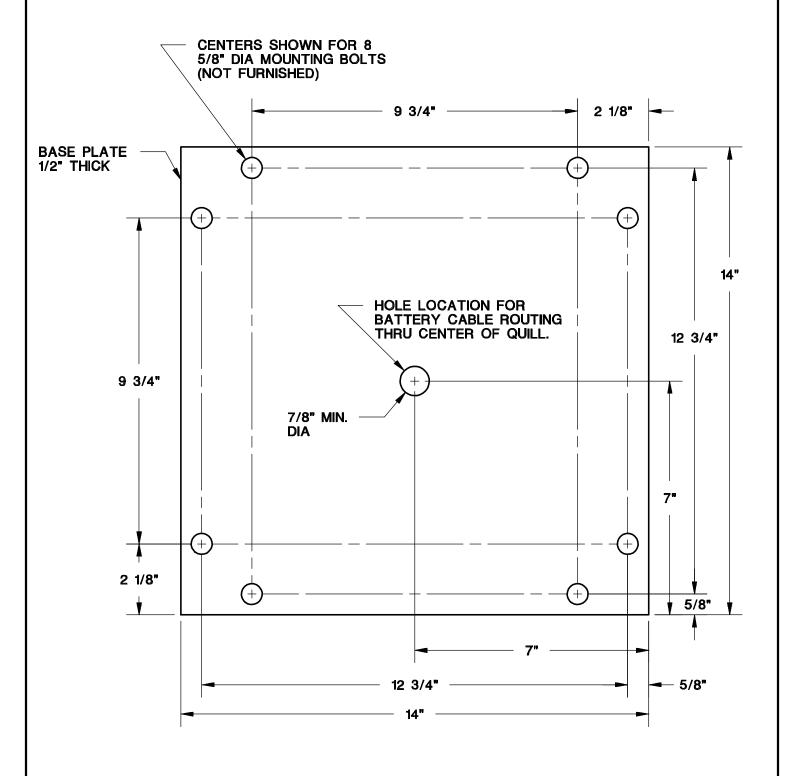

	172
MFG., INC. CINCINNATI, OHIO	ET

ET6KR, ET10K(X)	SUPERSEDES 6-22-98	l17390
17299 BASE MTG DIM	10-30-98A	C400

MOUNTING HOLE TEMPLATE

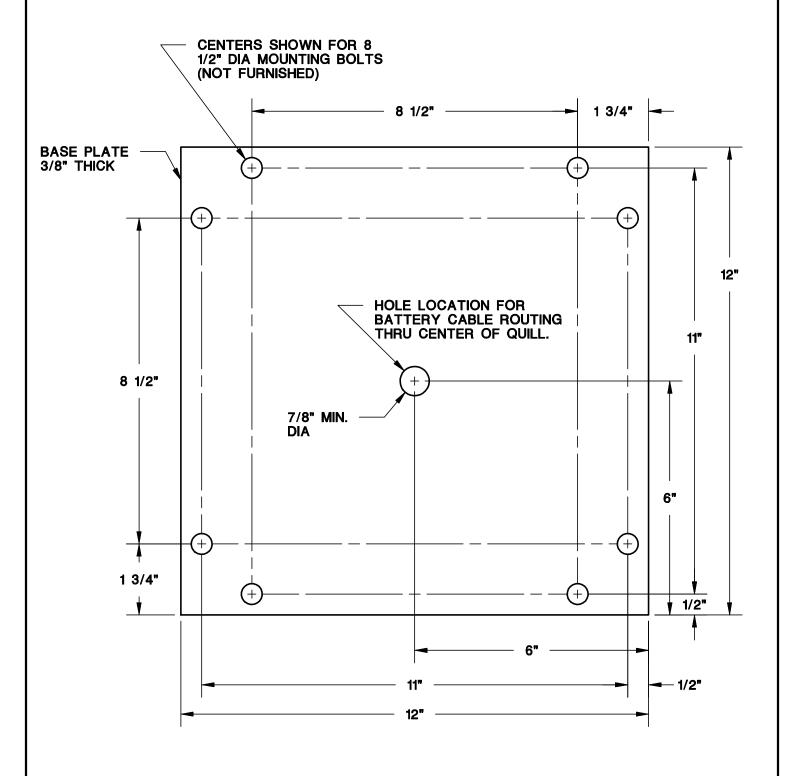

ENTURO MFG., INC. CINCINNATI, OHIO	13424 BASE MTG DIM	DATE 1-19-00B	SECTION C100
	ET6KM, DT7K ▲	SUPERSEDES 7-22-99A	17384