

INST-25700

SMALL STABILIZERS

PARTS & INSTALLATION MANUAL SMALL STABILIZERS

Included in this manual:

18500-CD, 23960-2, 13500, 24971-FP, 23962-2, 11822-2

VENCO VENTURO INDUSTRIES LLC 12110 BEST PLACE | CINCINNATI, OHIO 45241


VENCU VENTURO INDUSTRIES LLE

SMALL STABILIZERS INST-25700 - 9/29/2025 (Rev: B0)

25763 25480 25485 25702 25772 25773 25704 25706 25707 25708 25710 25711 25713 25714 25715 25717 25718 25719 25720 25721	MODELS & APPLICATIONS INSTALLATION GUIDELINES RECOMMENDED DEPARTURE ANGLE 18500-CD (STANDARD) DIMENSIONS 18500-CD-1 (SHORT-CROSSTUBE) DIMENSIONS 18500-CD RECOMMENDED MOUNTING 18500-CD REPLACEMENT PARTS 24971-FP OVERALL DIMENSIONS 24971-FP RECOMMENDED MOUNTING 24971-FP REPLACEMENT PARTS 23962-2 OVERALL DIMENSIONS 23962-2 REPLACEMENT PARTS 13500 OVERALL DIMENSIONS 13500 RECOMMENDED MOUNTING 13500 RECOMMENDED MOUNTING 13500 REPLACEMENT PARTS 23960-2 OVERALL DIMENSIONS 11822-2 OVERALL DIMENSIONS 11822-2 REPLACEMENT PARTS 13960-2 REPLACEMENT PARTS
----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

12-00073_VNT1 WARRANTY PAGE

SMALL STABILIZER MODELS & APPLICATIONS

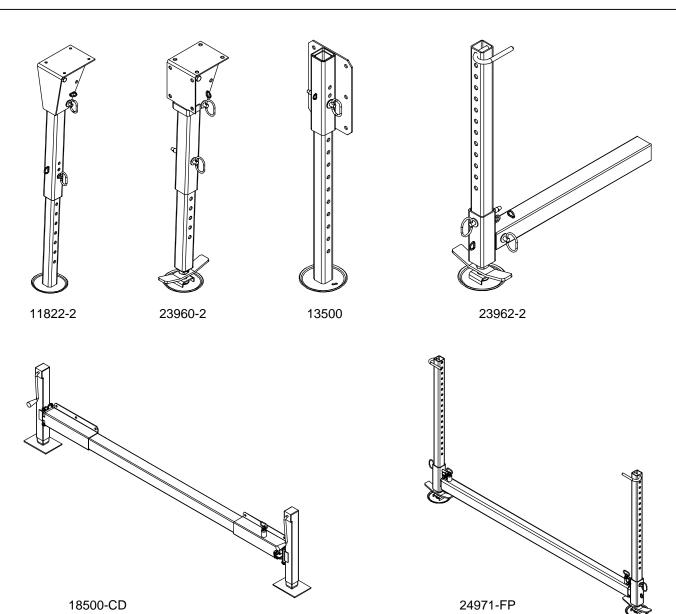

PART NO.	CRANE MODELS
13500	CE6K, CT2000 Series, CT310KX(P), DT7K, ET6-12KX(P)
11822-2	CE6K, CT2000 Series, CT310KX(P), DT7K, ET6-12KX(P)
18500-CD	CT310KX, DT7K, ET6-12KX(P)
23960-2	ET16-36KX(P), HT25-55KX-VLC
23962-2	ET16-36KX(P), HT25-55KX-VLC
24971-FP	ET36KX(P), HT25-55KX-VLC

	SMALL STABILIZERS	SUPERSEDES -	25763
;	MODELS & APPLICATIONS	09-20-24	-

STABILIZER INSTALLATION GUIDELINES

Read instructions completely prior to starting installation. If this unit is to be installed on a Venturo crane body, continue to the stabilizer assembly section of this manual.

Prior to mounting the stabilizer crosstube, orient the stabilizer so the longer pullout is on the crane side of the truck.

REAR MOUNTED

Crosstube should be centered at the rear of the truck and tied into the truck frame, body longsills, and crane support. Installer is responsible for proper mounting brackets and hardware that will be needed during this process. If unit is to be mounted on a service body, do not attach crosstube to body sheet metal unless otherwise specified. Allow clearance between crosstube and body for the stabilizer legs to be fully retracted. Consult chassis up-fitter guide prior to installation for proper welding and bolting procedures to chassis.

See the 'RECOMMENDED MOUNTING TO TRUCK FRAME' page

Leg installation (refer to assembly section of manual) legs are adjustable to maintain proper ground penetration of 4" to 6". The stabilizer is designed to level the truck and not lift the chassis off of the ground. They are designed to work in conjunction with the chassis suspension to stabilize the unit with the bulk of the load being supported by the chassis suspension and tires. Tires must be set at the proper pressure according to the chassis manufacture, stabilizers fully extended, and legs deployed on firm, level ground prior to crane use.

IMPORTANT - When legs are fully retracted in the stowed position, a 15° degree departure angle between the bottom of the rear tire and the lowest point of the stabilizer is recommended.

See the 'DEPARTURE ANGLE' page

For hydraulic stabilizers, the control valve and selector valve are supplied in kit. It is the installer's responsibility to supply necessary hoses and fittings between these valves and stabilizer. Refer to proper hydraulic schematic for your particular stabilizer model.

IMPORTANT - The selector valve is designed to separate the crane and stabilizer hydraulic circuits. This will not allow stabilizer use while in crane mode.

FRONT MOUNTED

Front mounted crosstube will be located on top of the chassis frame and welded to body longsills. Additional shear plates (installer supplied) to be welded to crosstube and bolted to chassis frame. Crosstube to be spaced away from body for leg clearance when fully retracted. See assembly section of manual for pullout and leg installation detail.




INSTALLATION GUIDELINES	12-08-23A	C200
STABILIZERS	SUPERSEDES 01-17-17	25480

RECOMMENDED DEPARTURE ANGLE



** VENCO VENTURO INDUSTRIES LLC	RECOMMENDED DEPARTURE ANGLE	
CINCINNATI, OHIO		
	REAR MOUNTED OUTRIGGERS	


		•
DATE	PAGE	١
08-25-22A	-	
SUPERSEDES	05405	
01-18-17	25485	,
	08-25-22A SUPERSEDES	08-25-22A - SUPERSEDES 25/195

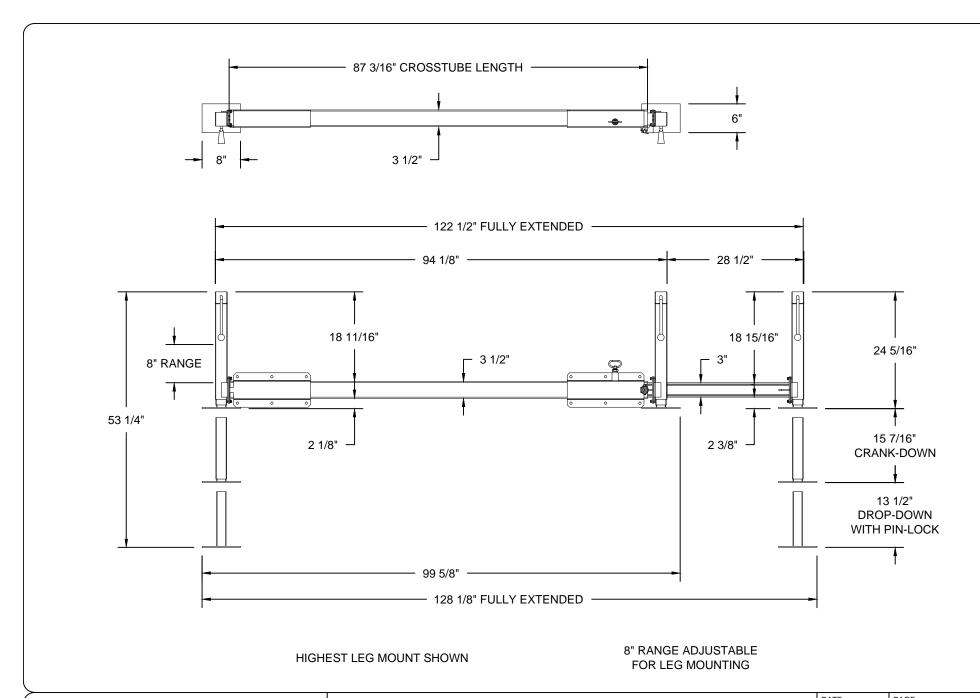




VENCO VENTURO INDUSTRIES LLC CINCINNATI, OHIO

OVERALL DIMENSIONS	02-09-17	04
18500-CD OUTRIGGER	SUPERSEDES -	25702

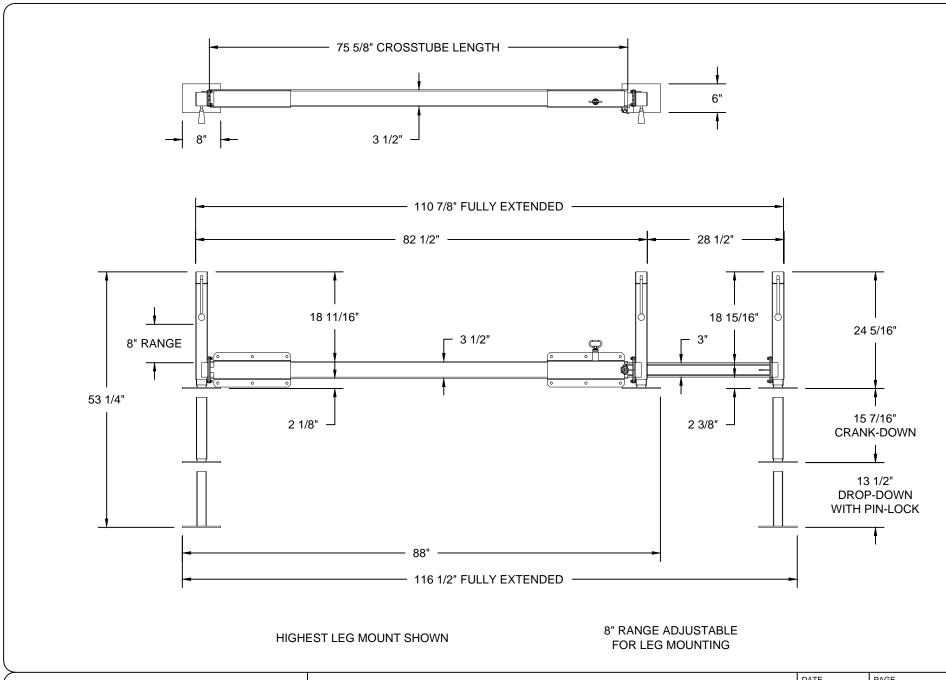




OVERALL DIMENSIONS	09-29-25	<u>-</u>
18500-CD-1 (SHORT-CROSSTUBE) STABILIZER	SUPERSEDES -	25772

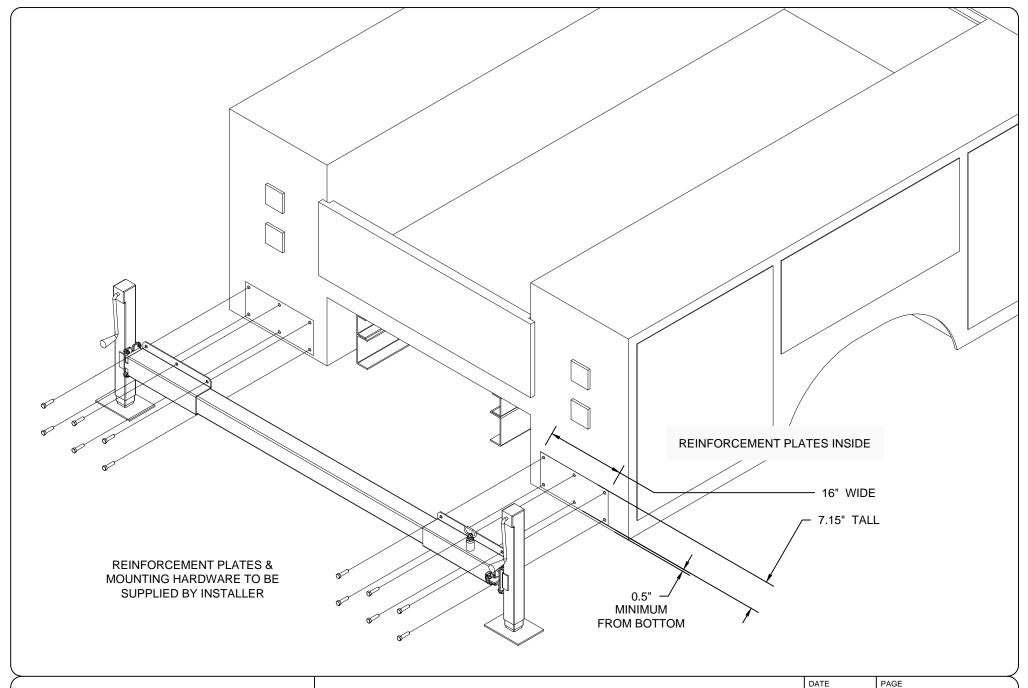




® VENCO VENTURO INDUSTRIES LLC CINCINNATI, OHIO

RECOMMENDED MOUNTING TO TRUCK BODY	02-09-17	05
18500-CD OUTRIGGER	SUPERSEDES -	25703

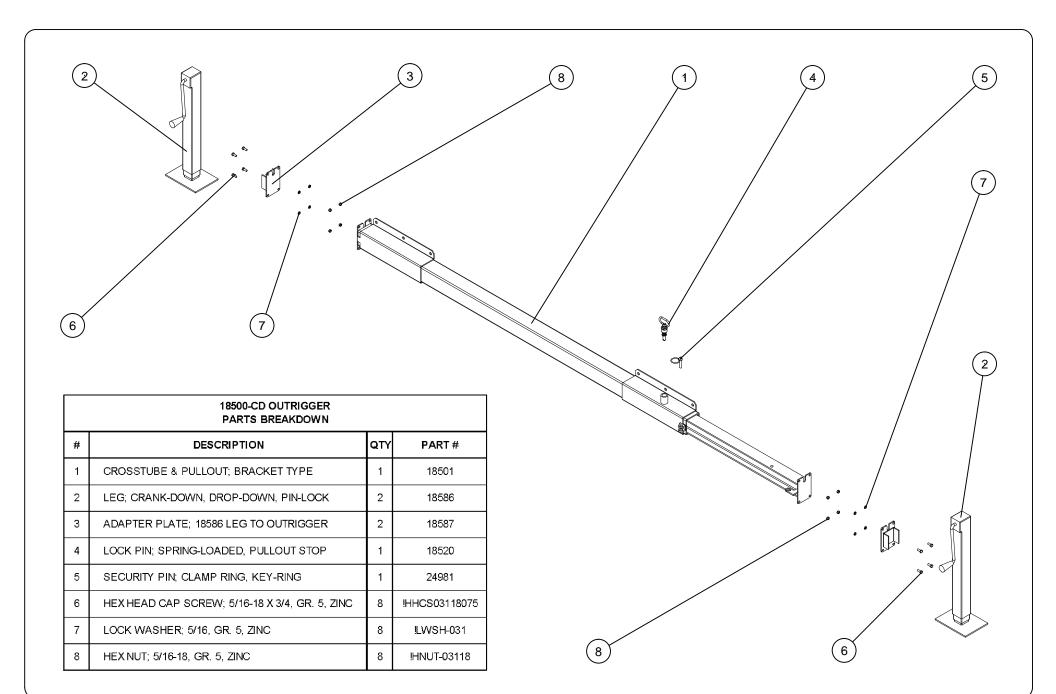


PARTS BREAKDOWN	02-09-17	PAGE 06
18500-CD OUTRIGGER	SUPERSEDES -	25704

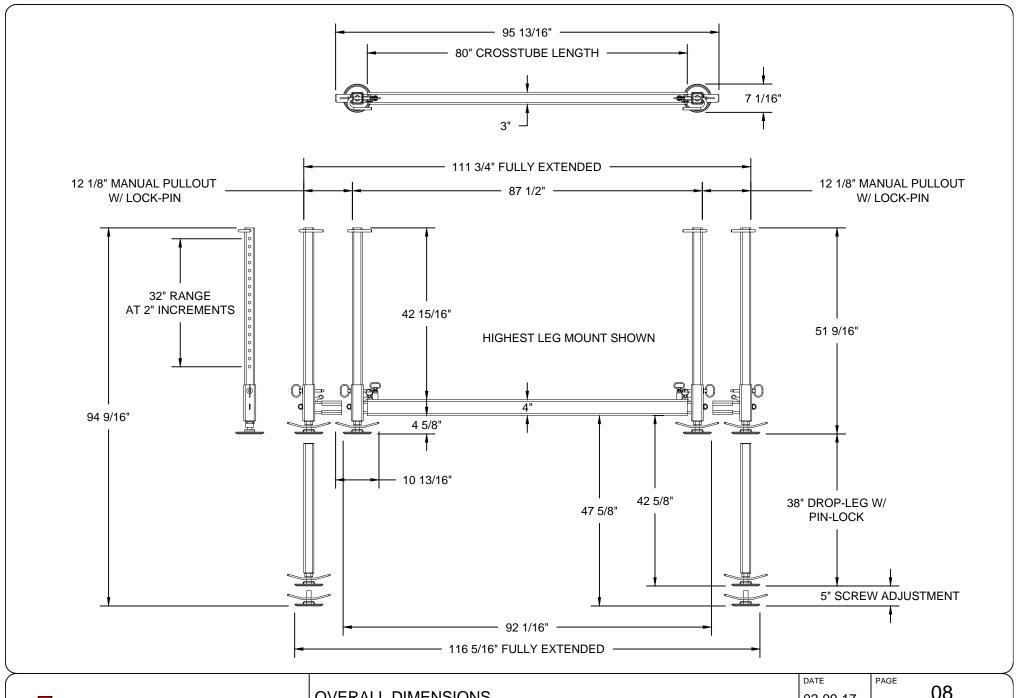




VENCO VENTURO INDUSTRIES LLC CINCINNATI, OHIO

OVERALL DIMENSIONS	02-09-17	08
24971-FP OUTRIGGER	SUPERSEDES -	25706

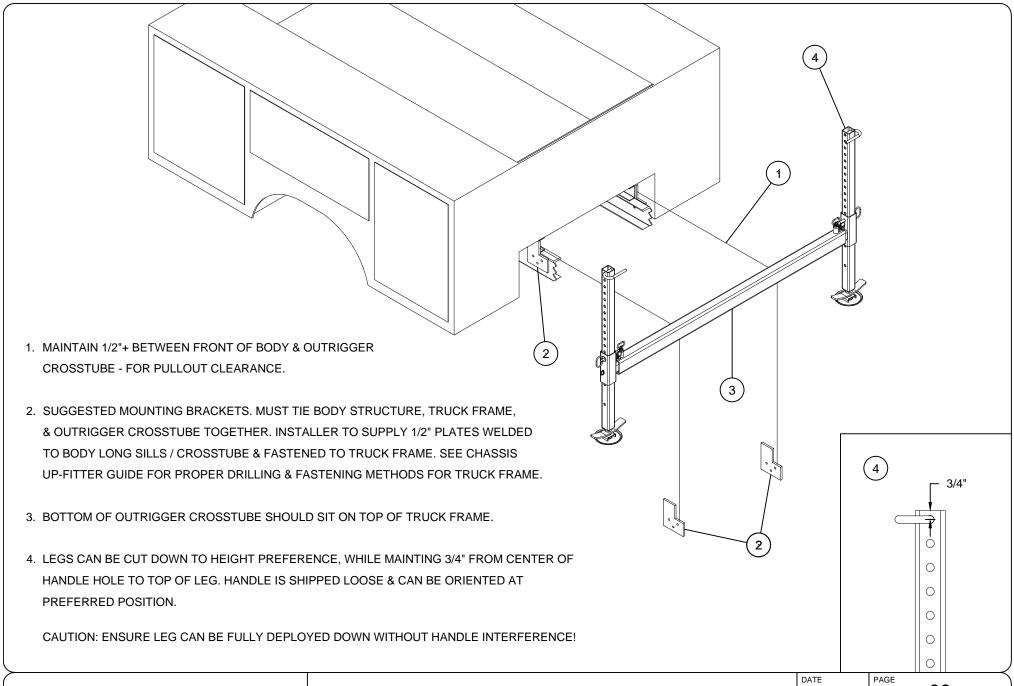

ENTUR

RECOMMENDED MOUNTING TO TRUCK FRAME	02-09-17	09
24971-FP OUTRIGGER	SUPERSEDES -	25707

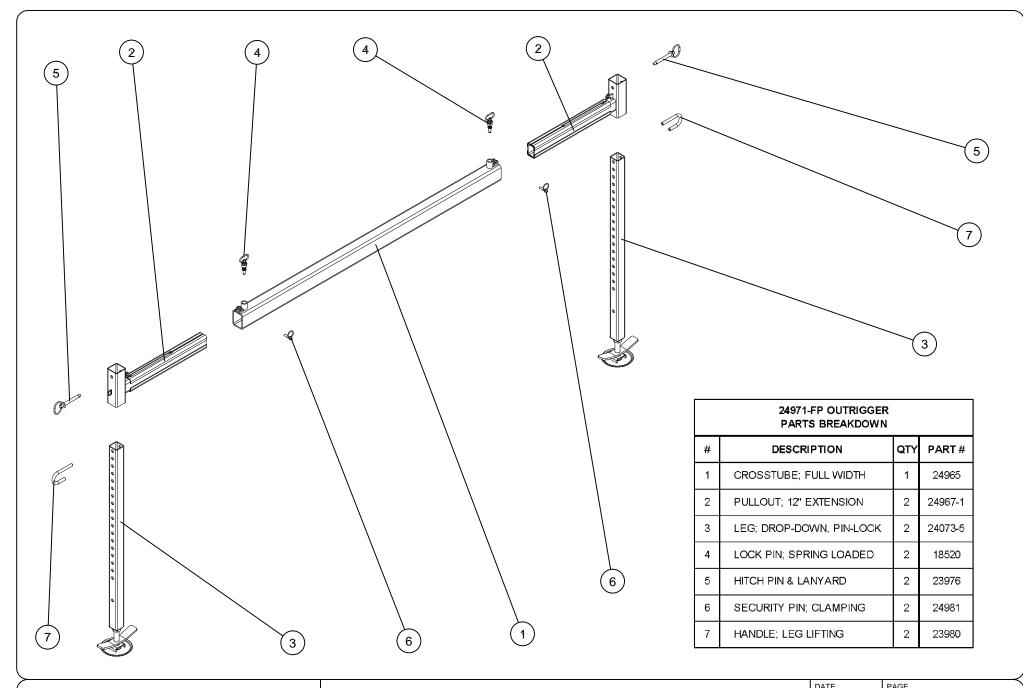


ENTURO®


VENCO VENTURO INDUSTRIES LLC CINCINNATI, OHIO

PARTS BREAKDOWN	02-09-17	10
24971-FP OUTRIGGER	SUPERSEDES -	25708

WARNING


THESE PRODUCTS ARE NOT FOR USE WITH PASSENGER LIFTS. THEY ARE NOT DESIGNED OR INTENDED TO BE USED WITH DEVICES THAT LIFT, SUPPORT OR OTHERWISE TRANSPORT PERSONNEL.

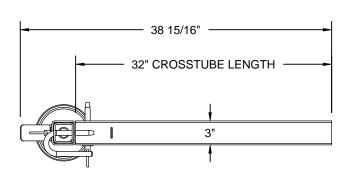

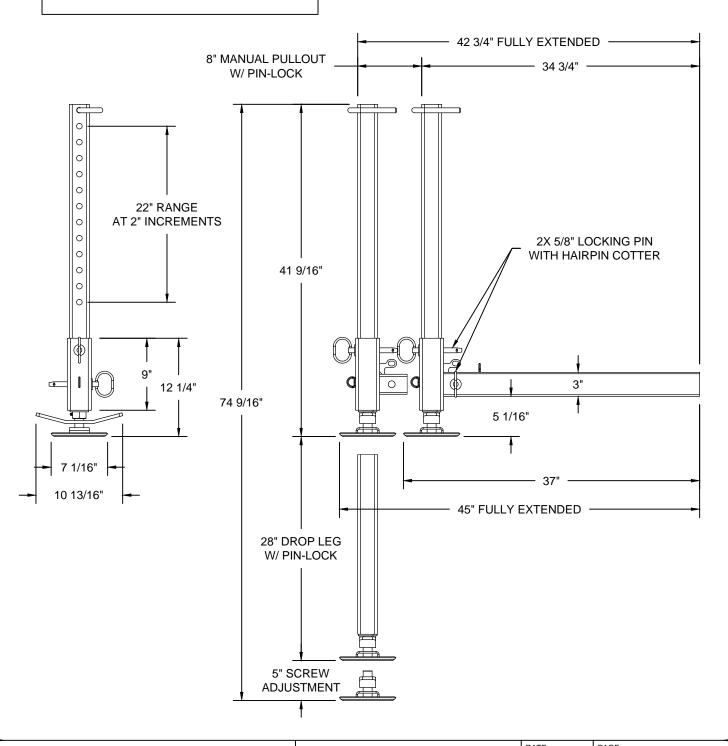



OVERALL DIMENSIONS	02-09-17	12
23962-2 OUTRIGGER	SUPERSEDES	25710

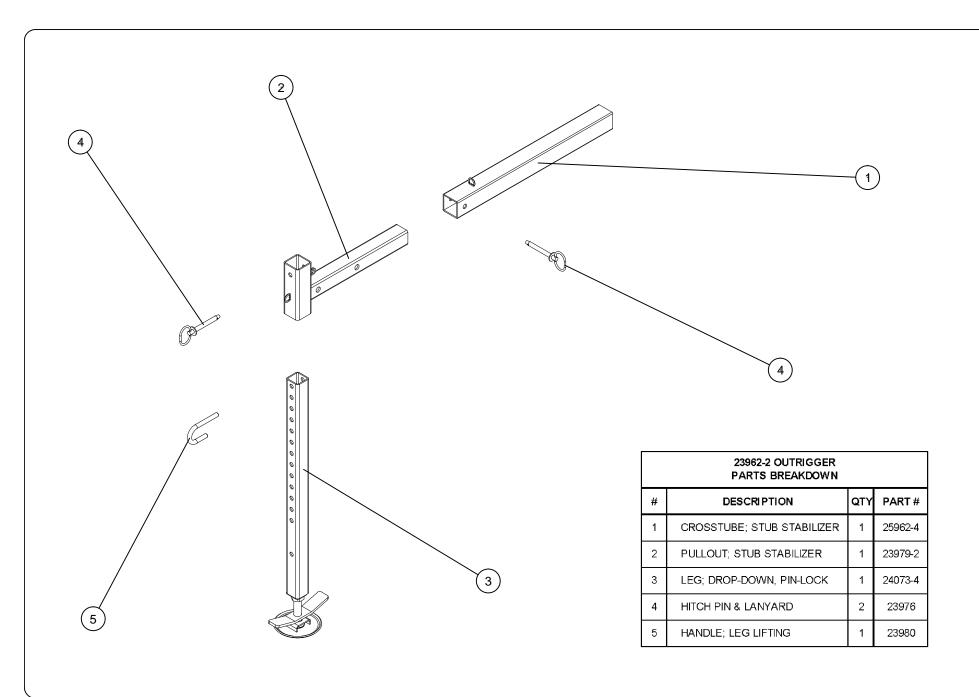


ENTURO®

PARTS BREAKDOWN	02-10-17	13
23962-2 OUTRIGGER	SUPERSEDES -	25711


WARNING

THESE PRODUCTS ARE NOT FOR USE WITH PASSENGER LIFTS. THEY ARE NOT DESIGNED OR INTENDED TO BE USED WITH DEVICES THAT LIFT, SUPPORT OR OTHERWISE TRANSPORT PERSONNEL.

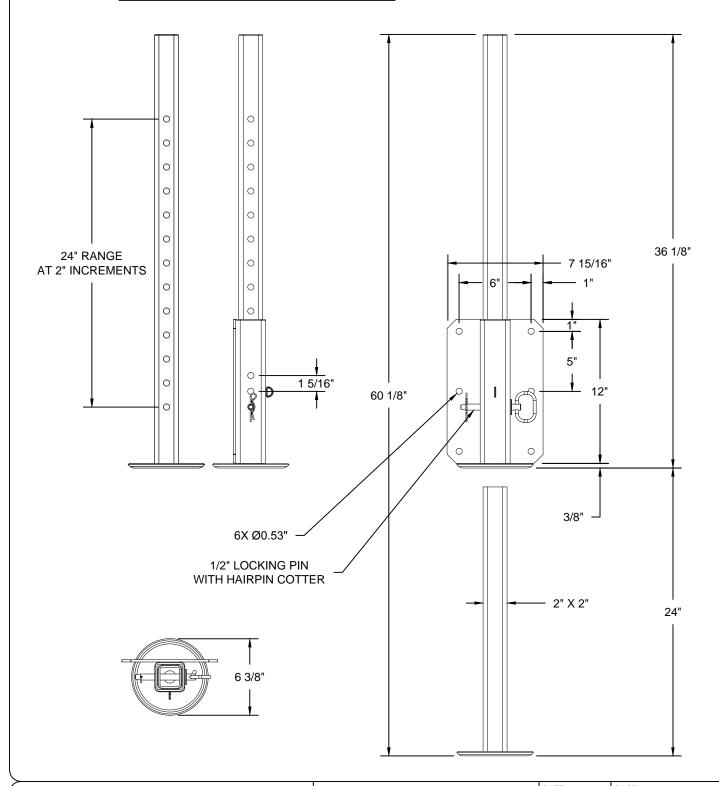




OVERALL BUMENIOLONIO	02-10-17	15
13500 DROP LEG	SUPERSEDES	25713

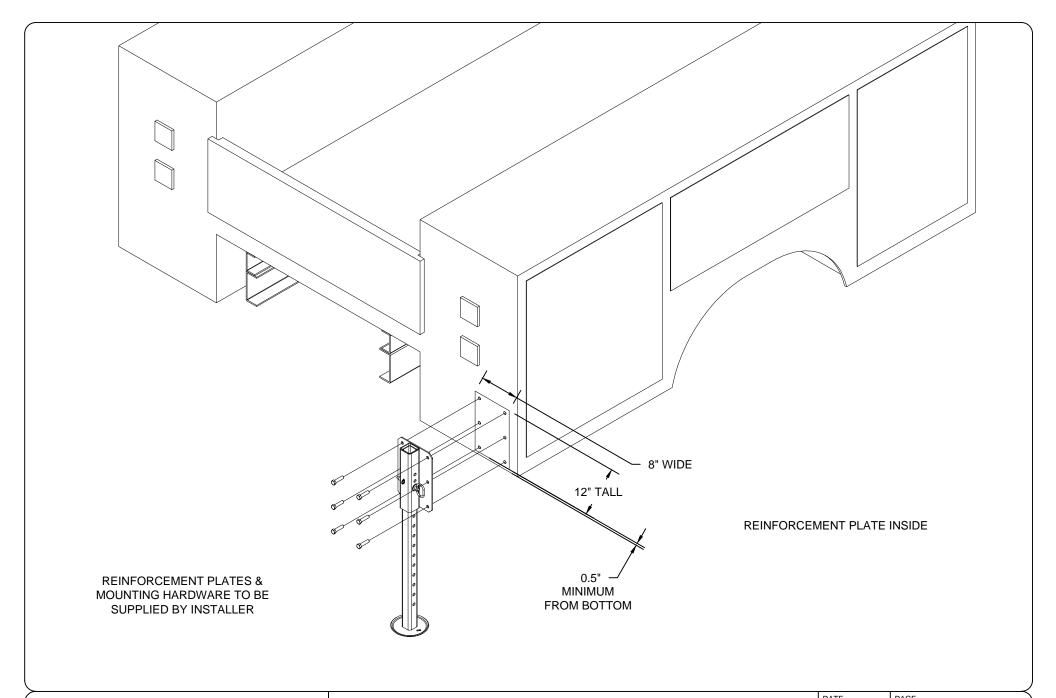



VENCO VENTURO INDUSTRIES LLC CINCINNATI. OHIO


RECOMMENDED MOUNTING TO TRUCK BODY	02-10-17	16
13500 DROP LEG	SUPERSEDES -	25714

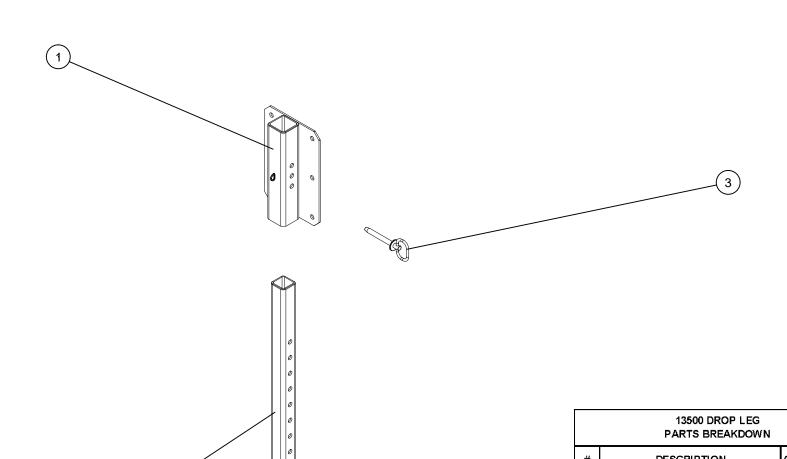

	13500 DROP LEG PARTS BREAKDOWN		
#	DESCRIPTION	QTY	PART#
1	LEG HOUSING; BRACKET TYPE	1	13500-1
2	LEG; DROP-DOWN, PIN-LOCK	1	13500-2
3	HITCH PIN & LANYARD	1	13700




PARTS BREAKDOWN	02-10-17	PAGE 17
13500 DROP LEG	SUPERSEDES -	25715

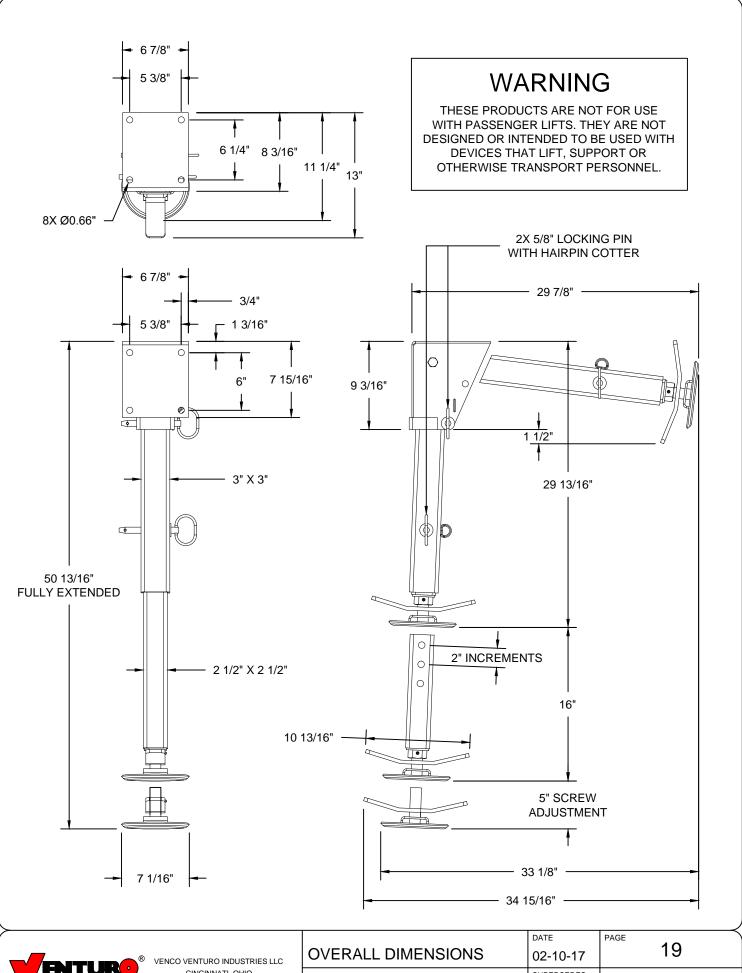




OVERALL DIMENSIONS	02-10-17	19
23960-2 FOLDAWAY LEG	SUPERSEDES	25717

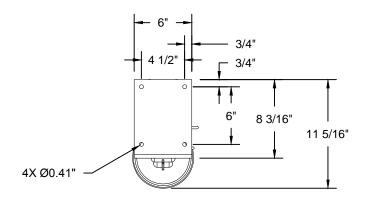


WARNING

THESE PRODUCTS ARE NOT FOR USE WITH PASSENGER LIFTS. THEY ARE NOT DESIGNED OR INTENDED TO BE USED WITH DEVICES THAT LIFT, SUPPORT OR OTHERWISE TRANSPORT PERSONNEL.

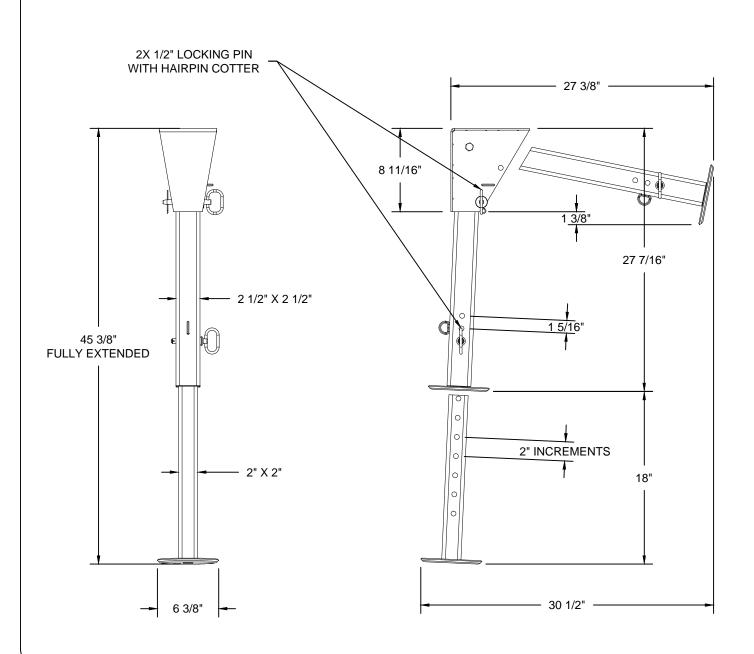

ENTURO [®]


OVERALL BUMENIOLONIO	02-10-17	20
11822-2 FOLDAWAY LEG	SUPERSEDES	25718

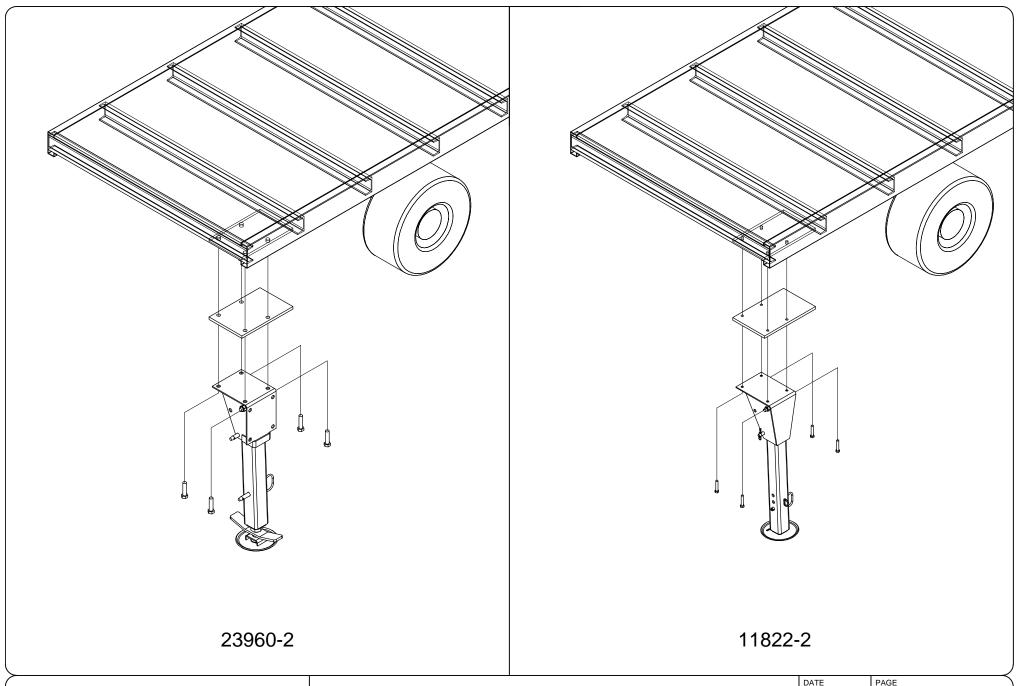



VENCO VENTURO INDUSTRIES LLC CINCINNATI, OHIO

RECOMMENDED MOUNTING	02-10-17	21
FOLDAWAY LEGS, 23960-2 & 11822-2	SUPERSEDES -	25719

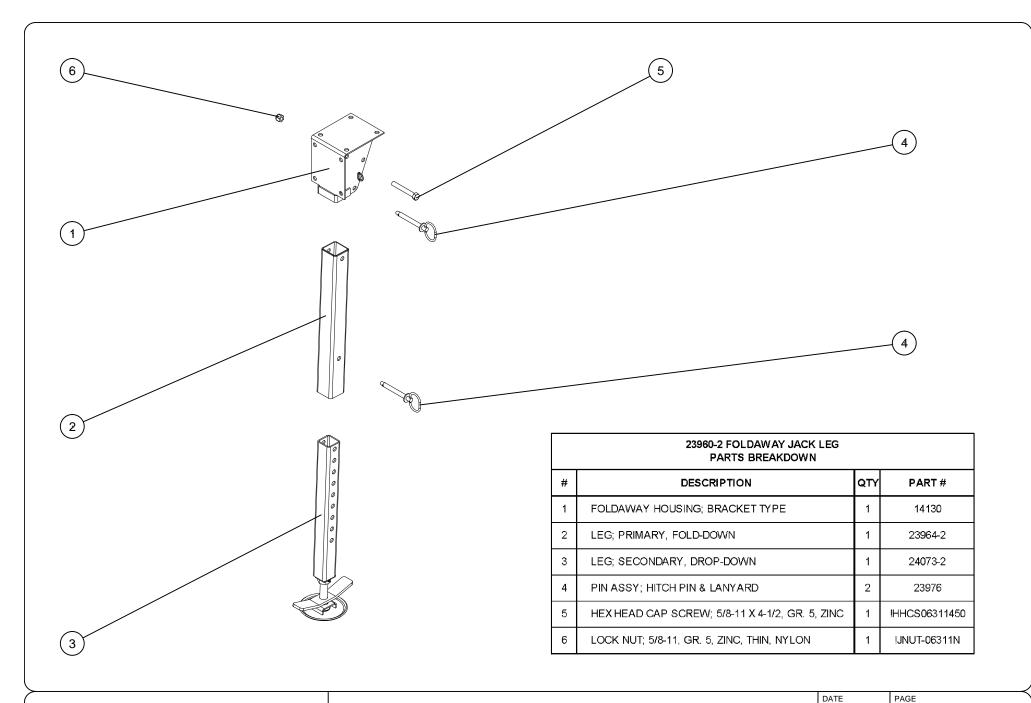


ENTURO® VENCO VENTURO INDUSTRIES LLC CINCINNATI, OHIO

PARTS BREAKDOWN 22

23960-2 FOLDAWAY LEG 502-10-17 22

25720

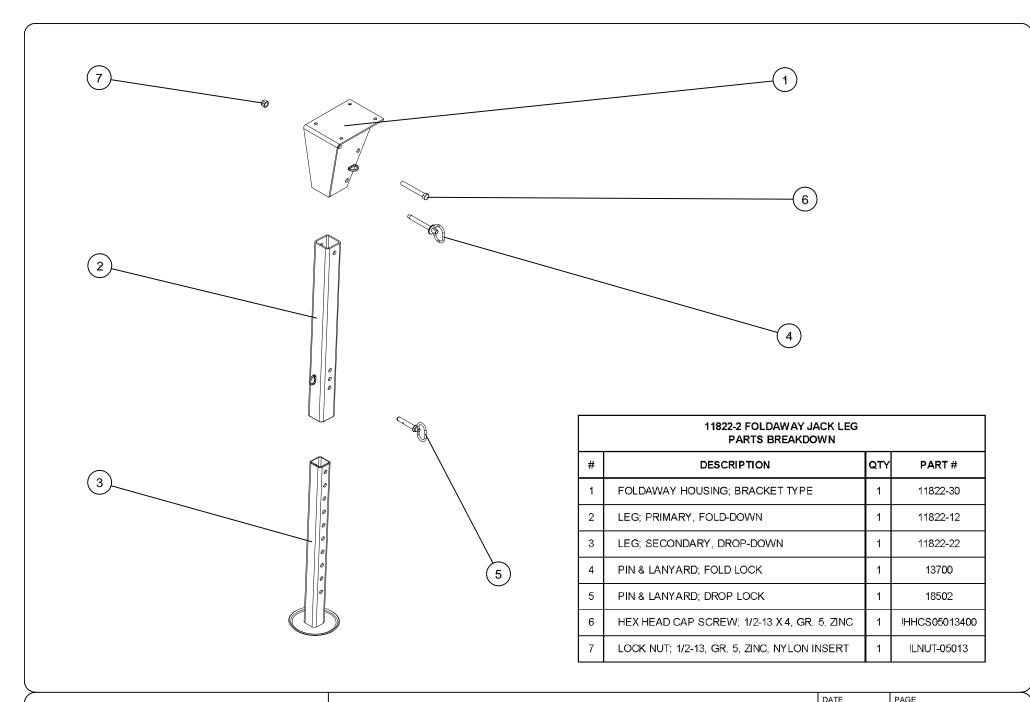

ENTURO ®	
-----------------	--

PARTS BREAKDOWN	02-10-17	23
11822-2 FOLDAWAY LEG	SUPERSEDES -	25721

VENTURO CRANES LIMITED WARRANTY POLICY



Venturo products are built to last...we guarantee them.

As a purchaser of any new Venturo product covered by warranty, you will receive 1 year of the most complete coverage available...and, at no added cost to you.

1-Year Limited Warranty Policy

This limited policy warrants new products of Venturo to be free from defects in material and workmanship for a period of one (1) year from date of original installation. OEM products or accessories purchased by Venturo as part of or offered with our product will carry the OEM manufacturer's respective warranty. Our warranty covers:

- Repair or replacement of product
- Labor to repair or replace product
- Freight to return and/or replace product

We shall not be liable for any contingent liabilities arising out of the improper function of any products. Warranty shall become void if the product is improperly installed, modified, damaged, abused or used for application other than intended use. There is no warranty of merchantability, fitness for a particular purpose, warranty arising from course of dealing or usage of trade, or any other implied or expressed warranty, except as made specifically herein. This warranty supersedes all previous warranties, written or implied.

Warranty Claims

Venco Venturo Industries LLC will make a good faith effort for prompt correction or other adjustment with respect to any product, which proves to be defective after our inspection and within the warranty period. Before any repairs are attempted or before returning any product, your Venturo Distributor is required to obtain a warranty claim number. This number is necessary for any claim to be considered. To obtain a warranty claim number, Venturo requires the model and serial number. Only authorized Venturo Distributors can perform warranty. For the name and address of your local Venturo Distributor call the **Warranty Claim Department - 513-772-8448.**

WARNING - It is the responsibility of the installer to ensure the installation is completed according to the manufacturer's recommendations, ensure the ultimate user understands how to operate product in a safe manner, and understands the need for regular service and maintenance by an authorized Venturo Distributor. No modifications or alterations may be made to any Venturo product without the expressed written consent of Venco Venturo Industries LLC. Installation of any Venturo product must be done by an authorized Venturo Distributor, to the standards of the industry; including maintenance, service and affixing of all instruction, safety and warning decals. Users should be instructed as to the safe operation at time of delivery. Maintenance, service, operation and safety warning decals are available on request from Venco Venturo Industries LLC.

VENCO VENTURO INDUSTRIES LLC

12110 BEST PLACE | CINCINNATI, OHIO 45241 P: 800-226-2238 | F: 513-326-5427 www.venturo.com

Revised: January 2015 12-00073_VNT1-D