

INST-26135

25500-PHX(-LC)

PARTS & INSTALLATION MANUAL **25500-PHX(-LC)**

Included in this manual:

25500-PHX(-LC)

- Stabilizer with Hydraulic Pullout and Hydraulic Legs
- Available in "Less Crosstube" (-LC) configuration

VENCO VENTURO INDUSTRIES LLC 12110 BEST PLACE | CINCINNATI, OHIO 45241

VENCU VENTURO (INDUSTRIES LLC D

25500-PHX(-LC) INST-26135 - 7/2/2025 (Rev: NEW3)

SECTION 100: DESCRIPTION & SPECIFICATIONS INSTALLATION GUIDELINES 7607100A

25480

26127 **INSTALLATION DIMENSIONS - SHORT LEG** INSTALLATION DIMENSIONS - LONG LEG 26132

7607200A **SECTION 200: INSTALLATION**

25484-2 RECOMMENDED MOUNTING TO TRUCK FRAME

25447-1 SELECTOR VALVE OVERVIEW 26138 25449

25485

26130

HYDRAULIC MAPPING - 1 OF 2
HYDRAULIC MAPPING - 2 OF 2
HYDRAULIC MAPPING - 2 OF 2
DEPARTURE ANGLE, REAR-MOUNTED STABILIZERS
MOUNTING THE LEGS
LESS-CROSSTUBE ASSY - 1 OF 3
LESS-CROSSTUBE ASSY - 2 OF 3
LESS-CROSSTUBE ASSY - 3 OF 3 25443 25444 25445

SECTION 400: REPLACEMENT PARTS REPLACEMENT PARTS DRAWING 7607400A

26136

26137

REPLACEMENT PARTS LIST
PULLOUT REPLACEMENT PARTS DRAWING 25450 PULLOUT REPLACEMENT PARTS LIST 25451

12-00073 VNT1 WARRANTY PAGE

SECTION 100

DESCRIPTION & SPECIFICATIONS



STABILIZER INSTALLATION GUIDELINES

Read instructions completely prior to starting installation. If this unit is to be installed on a Venturo crane body, continue to the stabilizer assembly section of this manual.

Prior to mounting the stabilizer crosstube, orient the stabilizer so the longer pullout is on the crane side of the truck.

REAR MOUNTED

Crosstube should be centered at the rear of the truck and tied into the truck frame, body longsills, and crane support. Installer is responsible for proper mounting brackets and hardware that will be needed during this process. If unit is to be mounted on a service body, do not attach crosstube to body sheet metal unless otherwise specified. Allow clearance between crosstube and body for the stabilizer legs to be fully retracted. Consult chassis up-fitter guide prior to installation for proper welding and bolting procedures to chassis.

See the 'RECOMMENDED MOUNTING TO TRUCK FRAME' page

Leg installation (refer to assembly section of manual) legs are adjustable to maintain proper ground penetration of 4" to 6". The stabilizer is designed to level the truck and not lift the chassis off of the ground. They are designed to work in conjunction with the chassis suspension to stabilize the unit with the bulk of the load being supported by the chassis suspension and tires. Tires must be set at the proper pressure according to the chassis manufacture, stabilizers fully extended, and legs deployed on firm, level ground prior to crane use.

IMPORTANT - When legs are fully retracted in the stowed position, a 15° degree departure angle between the bottom of the rear tire and the lowest point of the stabilizer is recommended.

See the 'DEPARTURE ANGLE' page

For hydraulic stabilizers, the control valve and selector valve are supplied in kit. It is the installer's responsibility to supply necessary hoses and fittings between these valves and stabilizer. Refer to proper hydraulic schematic for your particular stabilizer model.


IMPORTANT - The selector valve is designed to separate the crane and stabilizer hydraulic circuits. This will not allow stabilizer use while in crane mode.

FRONT MOUNTED

Front mounted crosstube will be located on top of the chassis frame and welded to body longsills. Additional shear plates (installer supplied) to be welded to crosstube and bolted to chassis frame. Crosstube to be spaced away from body for leg clearance when fully retracted. See assembly section of manual for pullout and leg installation detail.




INSTALLATION GUIDELINES	12-08-23A	C200
STABILIZERS	SUPERSEDES 01-17-17	25480

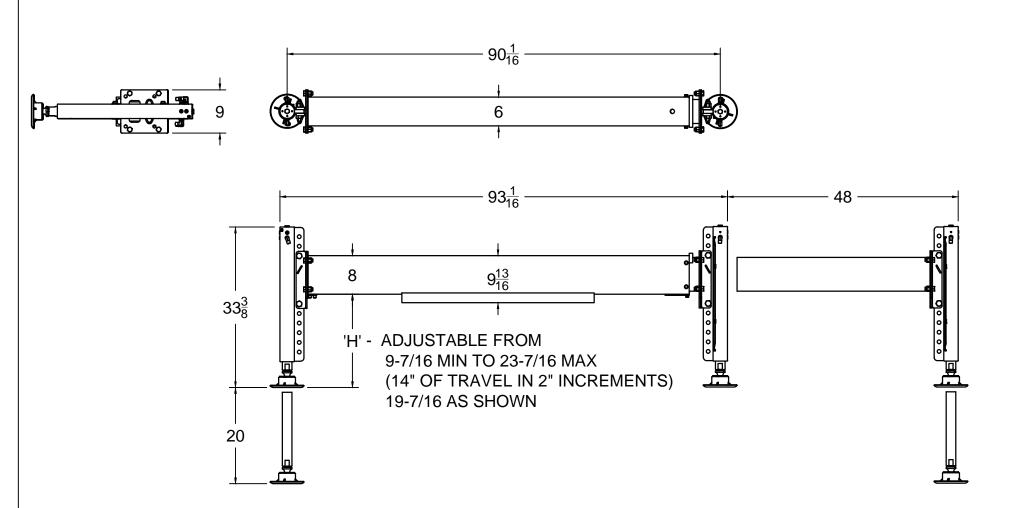

ENTURO ®

INSTALLATION DIMENSIONS	08-23-24A	C100
25500/26100-PHX-SL STABILIZER	SUPERSEDES 12-08-23	26127

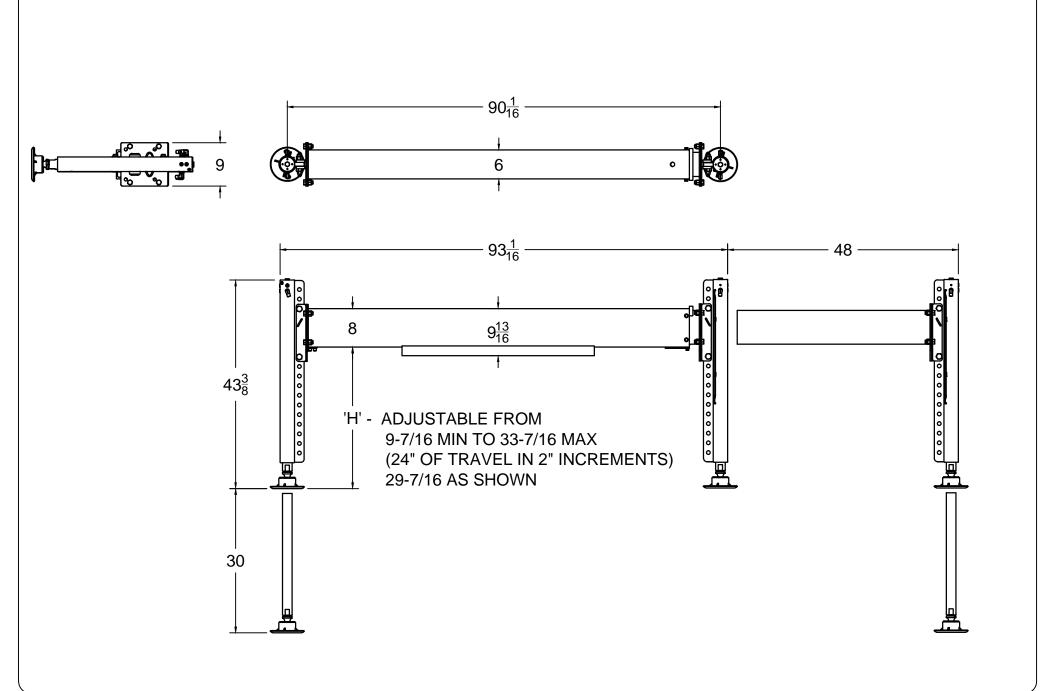




CINCINNATI, OHIO

INSTALLATION DIMENSIONS	08-23-24A	C100
▲ 25500/26100-PHX-LL STABILIZER	SUPERSEDES 01-25-24	26132


SECTION 200


INSTALLATION



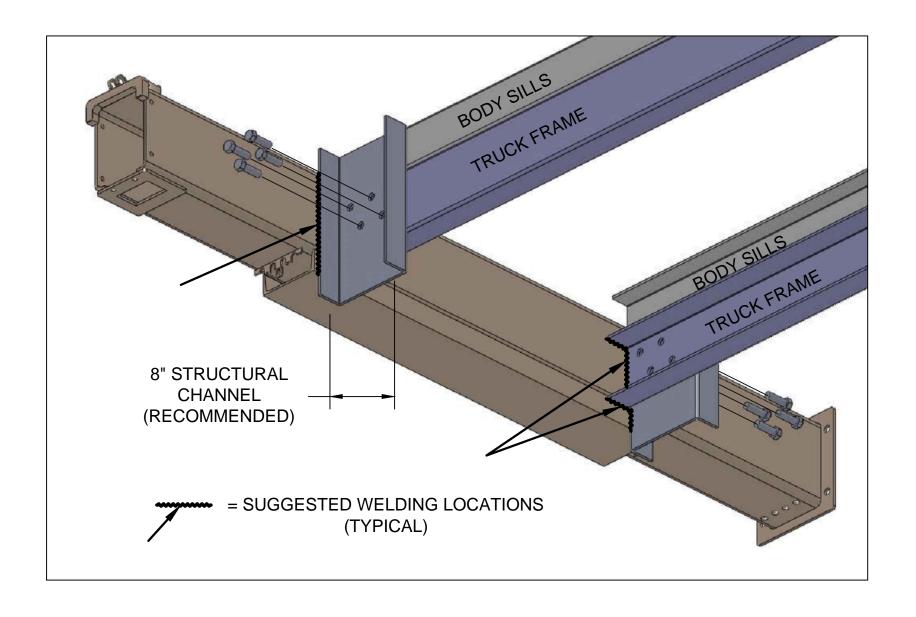

® VENCO VENTURO INDUSTRIES LLC	RECOMMENDED MOUNTING TO TRUCK FRAME	12-08-23A	C200
ENTURO VENTURO INDUSTRIES ELEC		SUPERSEDES	05404.0
	25100/26100 SERIES STABILIZERS	01-20-17	25484-2

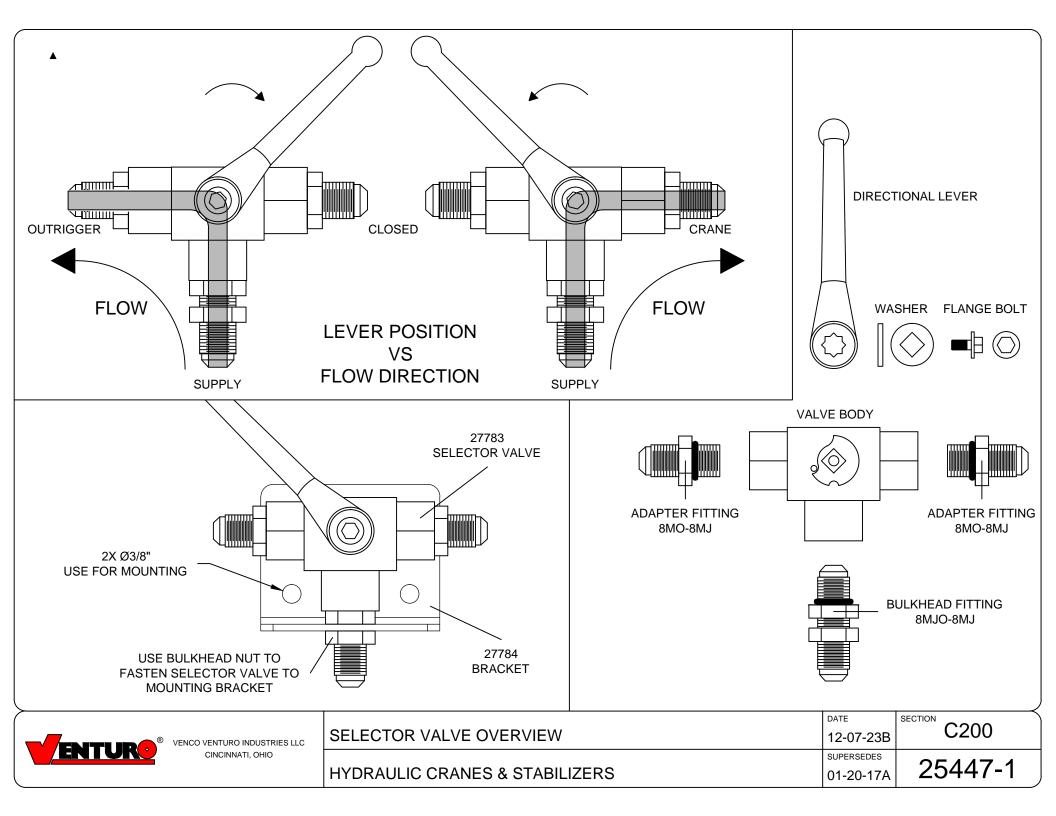

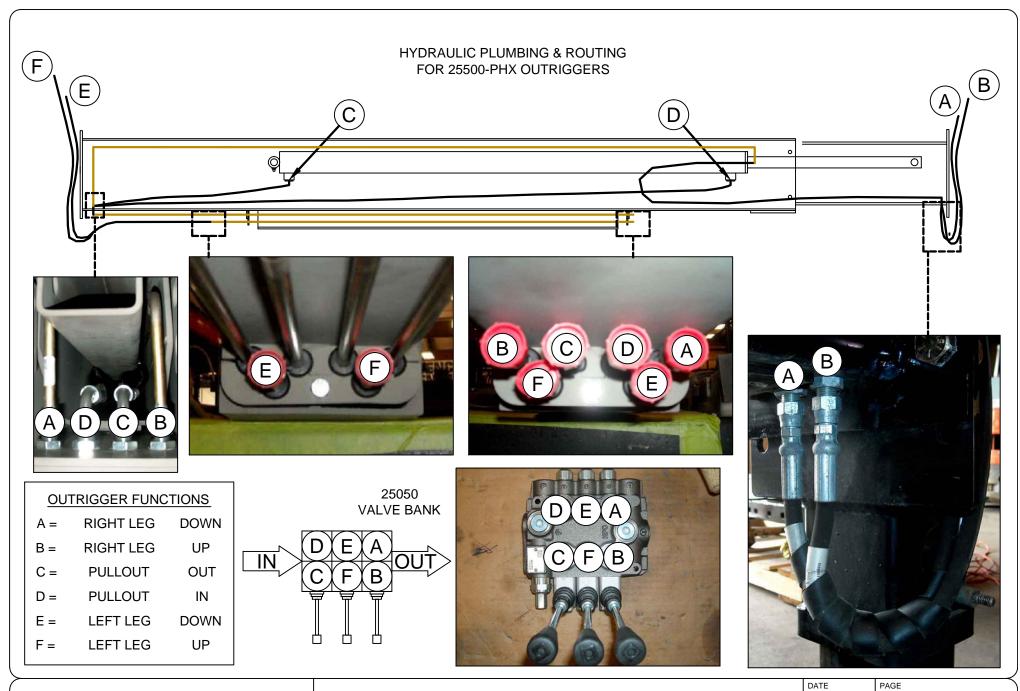




VENCO VENTURO INDUSTRIES LLC
CINCINNATI, OHIO

HYDRAULIC MAPPING, 1 OF 2

08-23-24 SUPERSEDES

25500-PHX OUTRIGGERS

-

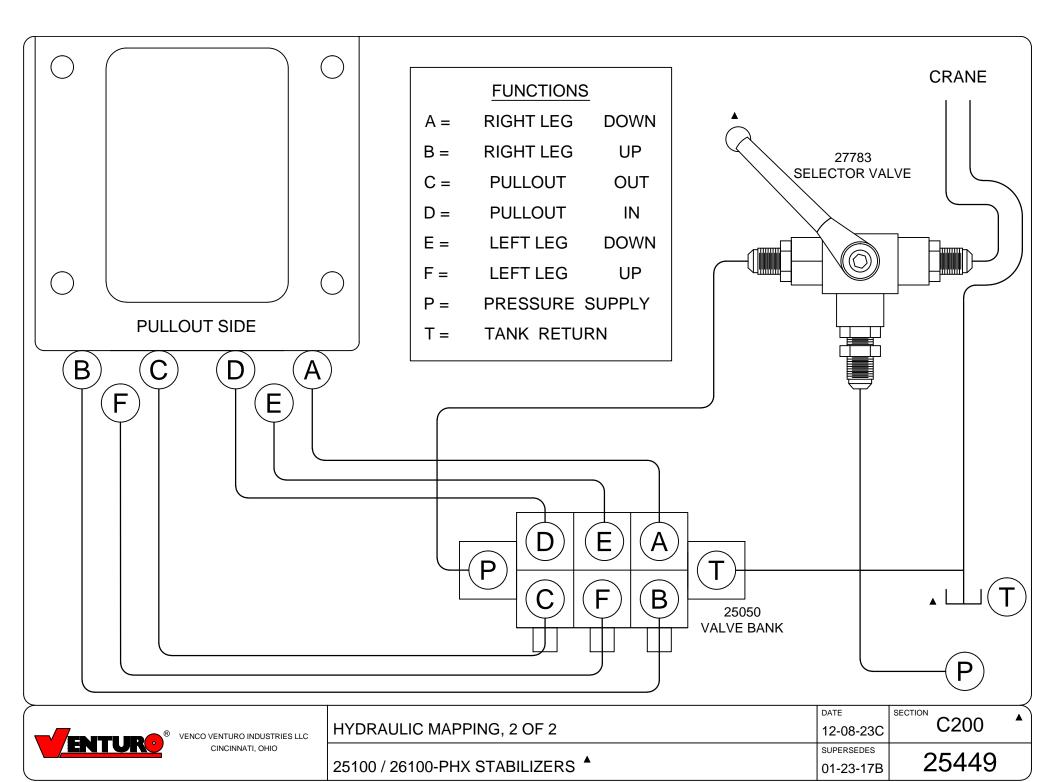


RECOMMENDED DEPARTURE ANGLE



`				
(DATE	PAGE
	® VENCO VENTURO INDUSTRIES LLC	RECOMMENDED DEPARTURE ANGLE	08-25-22A	-
	ENTURO VENTURO INDUSTRIES ELC CINCINNATI, OHIO		SUPERSEDES	05405
$\left(\right.$		REAR MOUNTED OUTRIGGERS	01-18-17	25485

MOUNTING THE STABILIZER LEGS - 25500-PHX & 26100-PHX SERIES STABILIZERS

- 1. Determine the desired vertical mounting position for the stabilizer legs.
- Use the provided Hardware to attach the Leg Mounting Bar to the Mounting Adapter Plate (between the two bars): ▲
 - [4] HEX HEAD CAP SCREW 3/4-10 x 3", GR. 5, ZINC
 - [4] LOCK NUT, NYLON-INSERT FULL-HEIGHT 3/4-10, GR. 5, ZINC
- 3. Torque Hex Head Cap Screws to 100 ft-lb.
- 4. Place 24964 DANGER Decal, [1] on each Leg as shown.

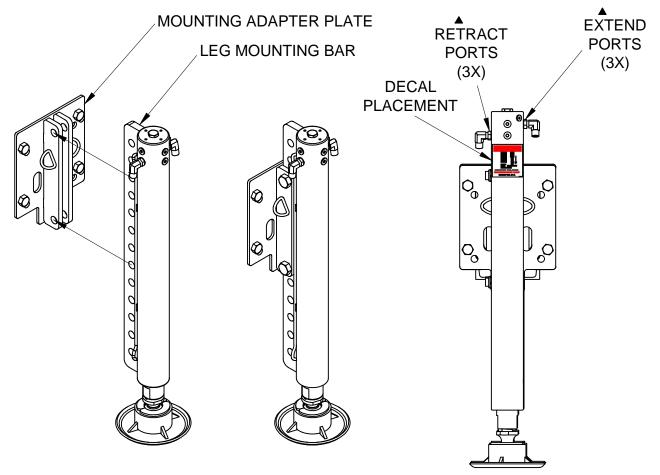

-SL ("SHORT LEG")

CYLINDER STROKE = 20"

VERTICAL POSITION ADJUSTABILITY = 14"

(7 MOUNTING POSITIONS IN 2" INCREMENTS)

-LL ("LONG LEG")

CYLINDER STROKE = 30"

VERTICAL POSITION ADJUSTABILITY = 24"

(12 MOUNTING POSITIONS IN 2" INCREMENTS)



	DATE	SECTION
MOUNTING THE LEGS	01-27-25A	C200
	SUPERSEDES	00400
25500 & 26100 STABILIZERS	12-14-23	26130

ASSEMBLY OF 25100-PHX OUTRIGGER WITH LESS-CROSSTUBE CONFIGURATION




PLACE [1] UHMW PAD ON PULLOUT PAGE 15 - ITEM 1



PLACE [1] UHMW PAD IN CROSSTUBE PAGE 15 - ITEM 1



ENSURE PULLOUT CYLINDER HOUSING & PLUMBING ARE TIED

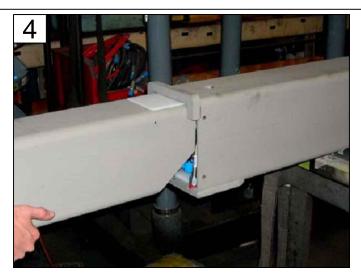

SLIDE PULLOUT INTO CROSSTUBE



FASTEN 25065 NUT BAR RETAINERS IN CROSSTUBE PAGE 15 - ITEMS 2, 7, 8, & 9



FASTEN 25077 NUT BAR RETAINER IN CROSSTUBE PAGE 15 - ITEMS 3, 4, 5, & 6



VENCO VENTURO INDUSTRIES LLC CINCINNATI, OHIO

LESS-CROSSTUBE ASSY	
25100-PHX OUTRIGGERS	

DATE PAGE
01-23-17A
SUPERSEDES

12

03-11-16

ASSEMBLY OF 25100-PHX OUTRIGGER WITH LESS-CROSSTUBE CONFIGURATION



FASTEN BULKHEADS - SEE NEXT STEP'S IMAGE PAGE 15 - ITEM 12



FASTEN 25138 TUBES TO BULKHEADS PAGE 15 - ITEM 13



PUSH GROMMETS AROUND TUBES
PAGE 15 - ITEM 15



PLACE 25139 TUBES PAGE 15 - ITEM 14



CLAMP AROUND GROMMETS PAGE 15 - ITEM 16



FASTEN CLAMP, PAGE 15 - ITEMS 4 & 17 REPEAT STEPS 9 TO 11 FOR OPPOSITE CLAMP



VENCO VENTURO INDUSTRIES LLC CINCINNATI, OHIO

LESS-CROSSTUBE ASSY	

DATE PAGE 01-23-17A

13

25100-PHX OUTRIGGERS

SUPERSEDES 03-11-16

ASSEMBLY OF 25100-PHX OUTRIGGER WITH LESS-CROSSTUBE CONFIGURATION



UNTIE PULLOUT CYLINDER HOUSING & PLUMBING



SEE HYDRAULIC MAPPING PAGES 8 & 9




INSERT SHAFT & COLLARS INTO CYLINDER HOUSING



PUSH SHAFT INTO TOP SLOT OF CROSSTUBE



WITH CYLINDER HOUSING CENTERED LOCTITE & FASTEN COLLARS FLUSH

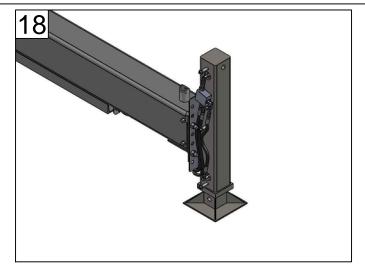

PROCEED TO MOUNTING OF LEGS & HYDRAULICS



VENCO VENTURO INDUSTRIES LLC CINCINNATI, OHIO

LESS-CROSSTUBE ASSY	

▲ DATE PAGE 01-23-17A

14


25100-PHX OUTRIGGERS

SUPERSEDES 03-11-16

SECTION 400

REPLACEMENT PARTS



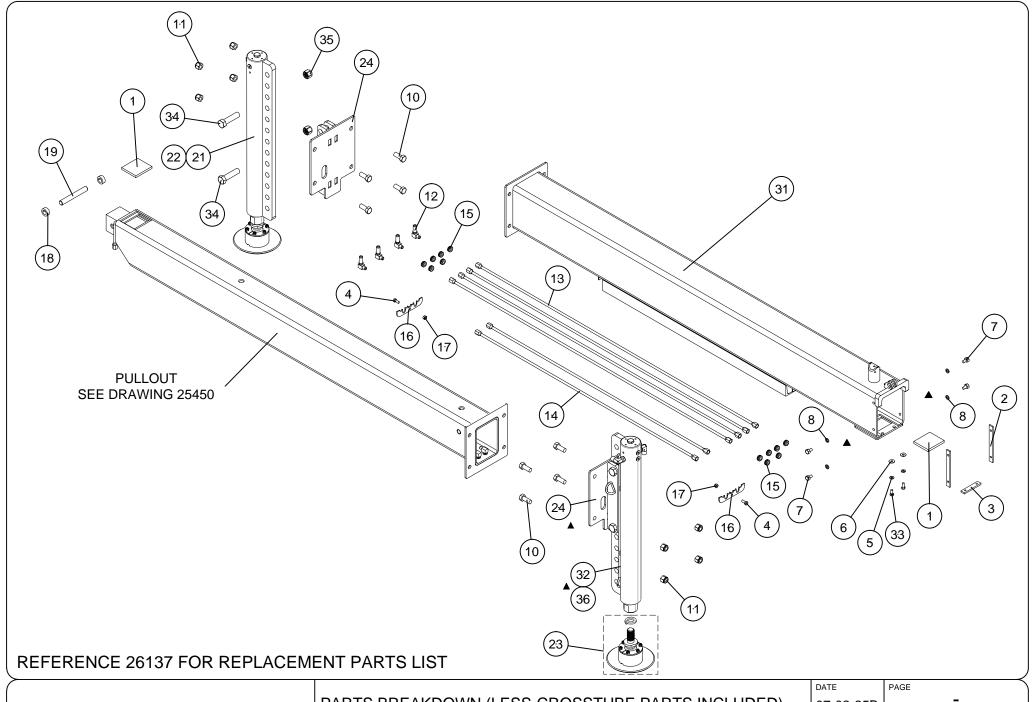

ENTURO® VENCO VENTO

PARTS BREAKDOWN (LESS-CROSSTUBE PARTS INCLUDED)		07-02-25B	-
		SUPERSEDES	00400
	25500-PHX OUTRIGGERS	01-24-25A	26136


PARTS BREAKDOWN, 25500-PHX OUTRIGGERS (LESS-CROSSTUBE PARTS INCLUDED)

					QTY	
	#	PART#	DESCRIPTION	-SL	-LL	
	*1	25081	UHMW PAD; 3-1/8 X 3-1/2 X 3/8	2	2	
	*2	25065	NUT BAR RETAINER	2	2	
	*3	25077	NUT BAR RETAINER	1	1	
	*4	!HHCS03118075	HEX HEAD CAP SCREW; 5/16-18 X 3/4, GR. 5	2	2	
*5 !LWSH-031 *6 !FWSH-031		!LWSH-031	LOCK WASHER; 5/16, GR. 5		2	
		!FWSH-031	FLAT WASHER; 5/16, GR. 5	2	2	
	*7	!HHCS03816050	HEX HEAD CAP SCREW; 3/8-16 X 1/2, GR. 5	4	4	
	*8	!LWSH-038	LOCK WASHER; 3/8, GR. 5	4	4	
•	*9	-	-	-	-	
	*10	!HHCS06311150-8	HEX HEAD CAP SCREW; 5/8-11 X 1-1/2, GR. 8	8	8	
	*11	!LNUT-06311-8	LOCK NUT; 5/8-11, GR. 8, NYLON INSERT	8	8	
	*12	H2701-0606	ADAPTER FITTING; 90° BULKHEAD, 6MJ-6MJ	4	4	
	*13	25138	HYDRAULIC TUBE, 60"	4	4	
	*14	25139	HYDRAULIC TUBE, 47"	2	2	
	*15	14883	GROMMETS, HYDRAULIC TUBES	12	12	
	*16	25157	CROSSTUBE CLAMP PLATE	2	2	
	*17	!LNUT-03118	LOCK NUT; 5/16-18, GR.5, NYLON INSERT	2	2	
	*18	28446	CLAMPING SHAFT COLLAR - 3/4 ID	2	2	
	*19	25051	SHAFT, CYLINDER HOUSING	1	1	
	*20	24964	DECAL; DANGER, CRUSHING INJURY	2	2	
	21	26109-SL	HYDRAULIC LEG W/ SWIVEL FOOT; SHORT	2	-	
	22	26109-LL	HYDRAULIC LEG W/ SWIVEL FOOT; LONG	-	2	
	23	26115	SWIVEL FOOT (ONLY)	-	-	
	24	25230	ADAPTER MOUNTING PLATE	2	2	
	*25	25050	VALVE BLOCK, 3-SPOOL	1	1	
	-	25218	HANDLE (ONLY), VALVE BLOCK	-	-	
	-	25219 LEVER BOX (ONLY), VALVE BLOCK		-	-	
	*26	H6400-0808	ADAPTER FITTING; STRAIGHT, 8MJ-8MO	2	2	
	*27	H6400-0608	ADAPTER FITTING; STRAIGHT, 6MJ-8MO	6	6	
	*28	27783	SELECTOR VALVE	1	1	
	*29 27784		BRACKET, SELECTOR VALVE	1	1	
	30	INST-21024 OUTRIGGER & ACCESSORIES MANUAL		1	1	
	31	25085-2	CROSSTUBE; 25100 SERIES OUTRIGGERS	1	1	
	32	25232	25232 HYD LEG; SHORT, 20" STROKE (CYLINDER ONLY)		-	
	*33	!HHCS03118063	HEX HEAD CAP SCREW; 5/16-18 X 5/8, GR. 5	2	2	
	34	!HHCS07510300	HEX HEAD CAP SCREW; 3/4-10 X 3, GR. 5	4	4	
	35			4	4	
	36	25233	HYD LEG; LONG, 30" STROKE (CYLINDER ONLY)	-	-	

^{*} WHEN PURCHASED IN "LESS CROSS TUBE" ("LCT") CONFIGURATION, THESE ITEMS WILL BE SHIPPED LOOSE AND REQUIRE INSTALLATION

REFERENCE 26136 FOR REPLACEMENT PARTS DRAWING

ENTURO VENCO VENTURO INDUSTRIE CINCINNATI, OHIO	SILC SILV OUTPLOOF	SUPERSEDES 04-24-25B	26137
® VENCO VENTURO INDUSTRIES LLC	PARTS BREAKDOWN	07-02-25C	-
		DATE	PAGE

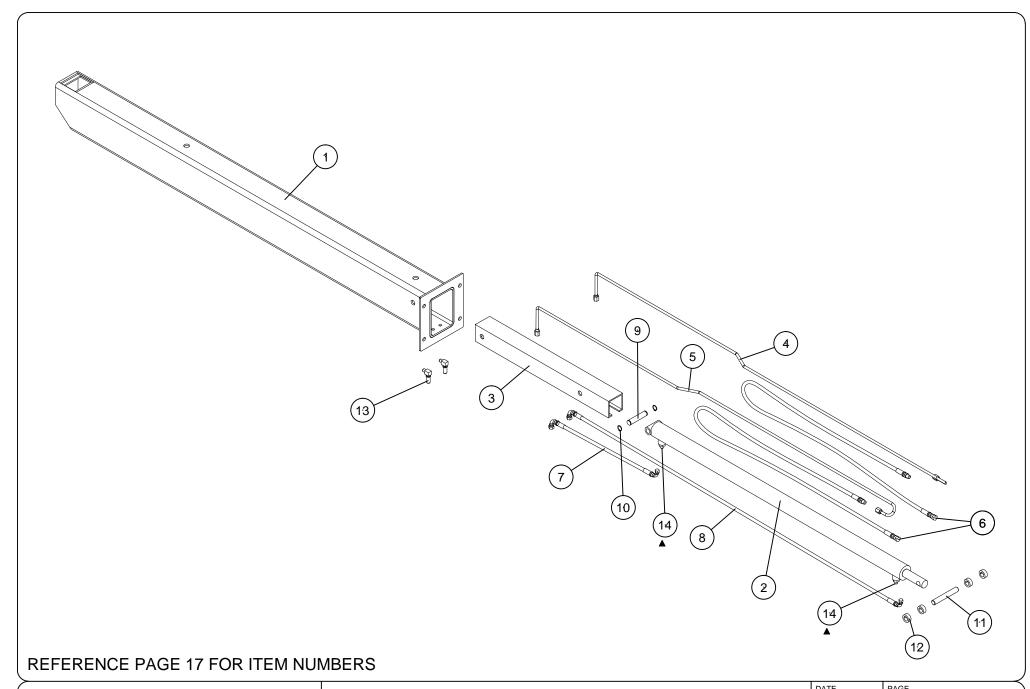



VENCO VENTURO INDUSTRIES LLC CINCINNATI, OHIO

PARTS BREAKDOWN	07-30-24B	18
	SUPERSEDES	25450
25100-PHX PULLOUT ASSEMBLY	01-23-17A	23430

PARTS BREAKDOWN, 25100-PHX PULLOUT ASSEMBLY

#	PART#	DESCRIPTION	QTY
1	25087-2	PULLOUT; 4', 25100-PHX OUTRIGGERS	1
2	25086	EXTENSION CYLINDER; 4', 25100-PHX	1
3	25088	HOUSING; EXTENSION CYLINDER BASE-END	1
4	25137	HYDRAULIC TUBE; RIGHT LEG, DOWN	1
5	25136	HYDRAULIC TUBE; RIGHT LEG, UP	1
6	25149	HOSE ASSEMBLY; RIGHT LEG, UP & DOWN	2
7	25154	HOSE ASSEMBLY; CYLINDER, OUT	1
8	25155	HOSE ASSEMBLY; CYLINDER, IN	1
9	25049	SHAFT; CYLINDER & HOUSING, BASE-END	1
10	!SRNG-075	SNAP RING; 3/4", PLATED	2
11	25052	SHAFT; CYLINDER & PULLOUT, ROD-END	1
12	28446	CLAMPING SHAFT COLLAR - 3/4" ID	4
13	H2701LN-0606	BULKHEAD FITTINGS; 90°, 6MJ-6MJ, L-NUT	2
14	H6400-0408	HYD TUBE ADAPTER - 4MJ-8MO	2



	DATE	PAGE
PARTS BREAKDOWN	07-30-24C	17
	SUPERSEDES	05454
25100-PHX PULLOUT ASSY	07-26-24B	25451

VENTURO CRANES LIMITED WARRANTY POLICY



Venturo products are built to last...we guarantee them.

As a purchaser of any new Venturo product covered by warranty, you will receive 1 year of the most complete coverage available...and, at no added cost to you.

1-Year Limited Warranty Policy

This limited policy warrants new products of Venturo to be free from defects in material and workmanship for a period of one (1) year from date of original installation. OEM products or accessories purchased by Venturo as part of or offered with our product will carry the OEM manufacturer's respective warranty. Our warranty covers:

- Repair or replacement of product
- Labor to repair or replace product
- Freight to return and/or replace product

We shall not be liable for any contingent liabilities arising out of the improper function of any products. Warranty shall become void if the product is improperly installed, modified, damaged, abused or used for application other than intended use. There is no warranty of merchantability, fitness for a particular purpose, warranty arising from course of dealing or usage of trade, or any other implied or expressed warranty, except as made specifically herein. This warranty supersedes all previous warranties, written or implied.

Warranty Claims

Venco Venturo Industries LLC will make a good faith effort for prompt correction or other adjustment with respect to any product, which proves to be defective after our inspection and within the warranty period. Before any repairs are attempted or before returning any product, your Venturo Distributor is required to obtain a warranty claim number. This number is necessary for any claim to be considered. To obtain a warranty claim number, Venturo requires the model and serial number. Only authorized Venturo Distributors can perform warranty. For the name and address of your local Venturo Distributor call the **Warranty Claim Department - 513-772-8448.**

WARNING - It is the responsibility of the installer to ensure the installation is completed according to the manufacturer's recommendations, ensure the ultimate user understands how to operate product in a safe manner, and understands the need for regular service and maintenance by an authorized Venturo Distributor. No modifications or alterations may be made to any Venturo product without the expressed written consent of Venco Venturo Industries LLC. Installation of any Venturo product must be done by an authorized Venturo Distributor, to the standards of the industry; including maintenance, service and affixing of all instruction, safety and warning decals. Users should be instructed as to the safe operation at time of delivery. Maintenance, service, operation and safety warning decals are available on request from Venco Venturo Industries LLC.

VENCO VENTURO INDUSTRIES LLC

12110 BEST PLACE | CINCINNATI, OHIO 45241 P: 800-226-2238 | F: 513-326-5427 www.venturo.com

Revised: January 2015 12-00073_VNT1-D